WA 3000

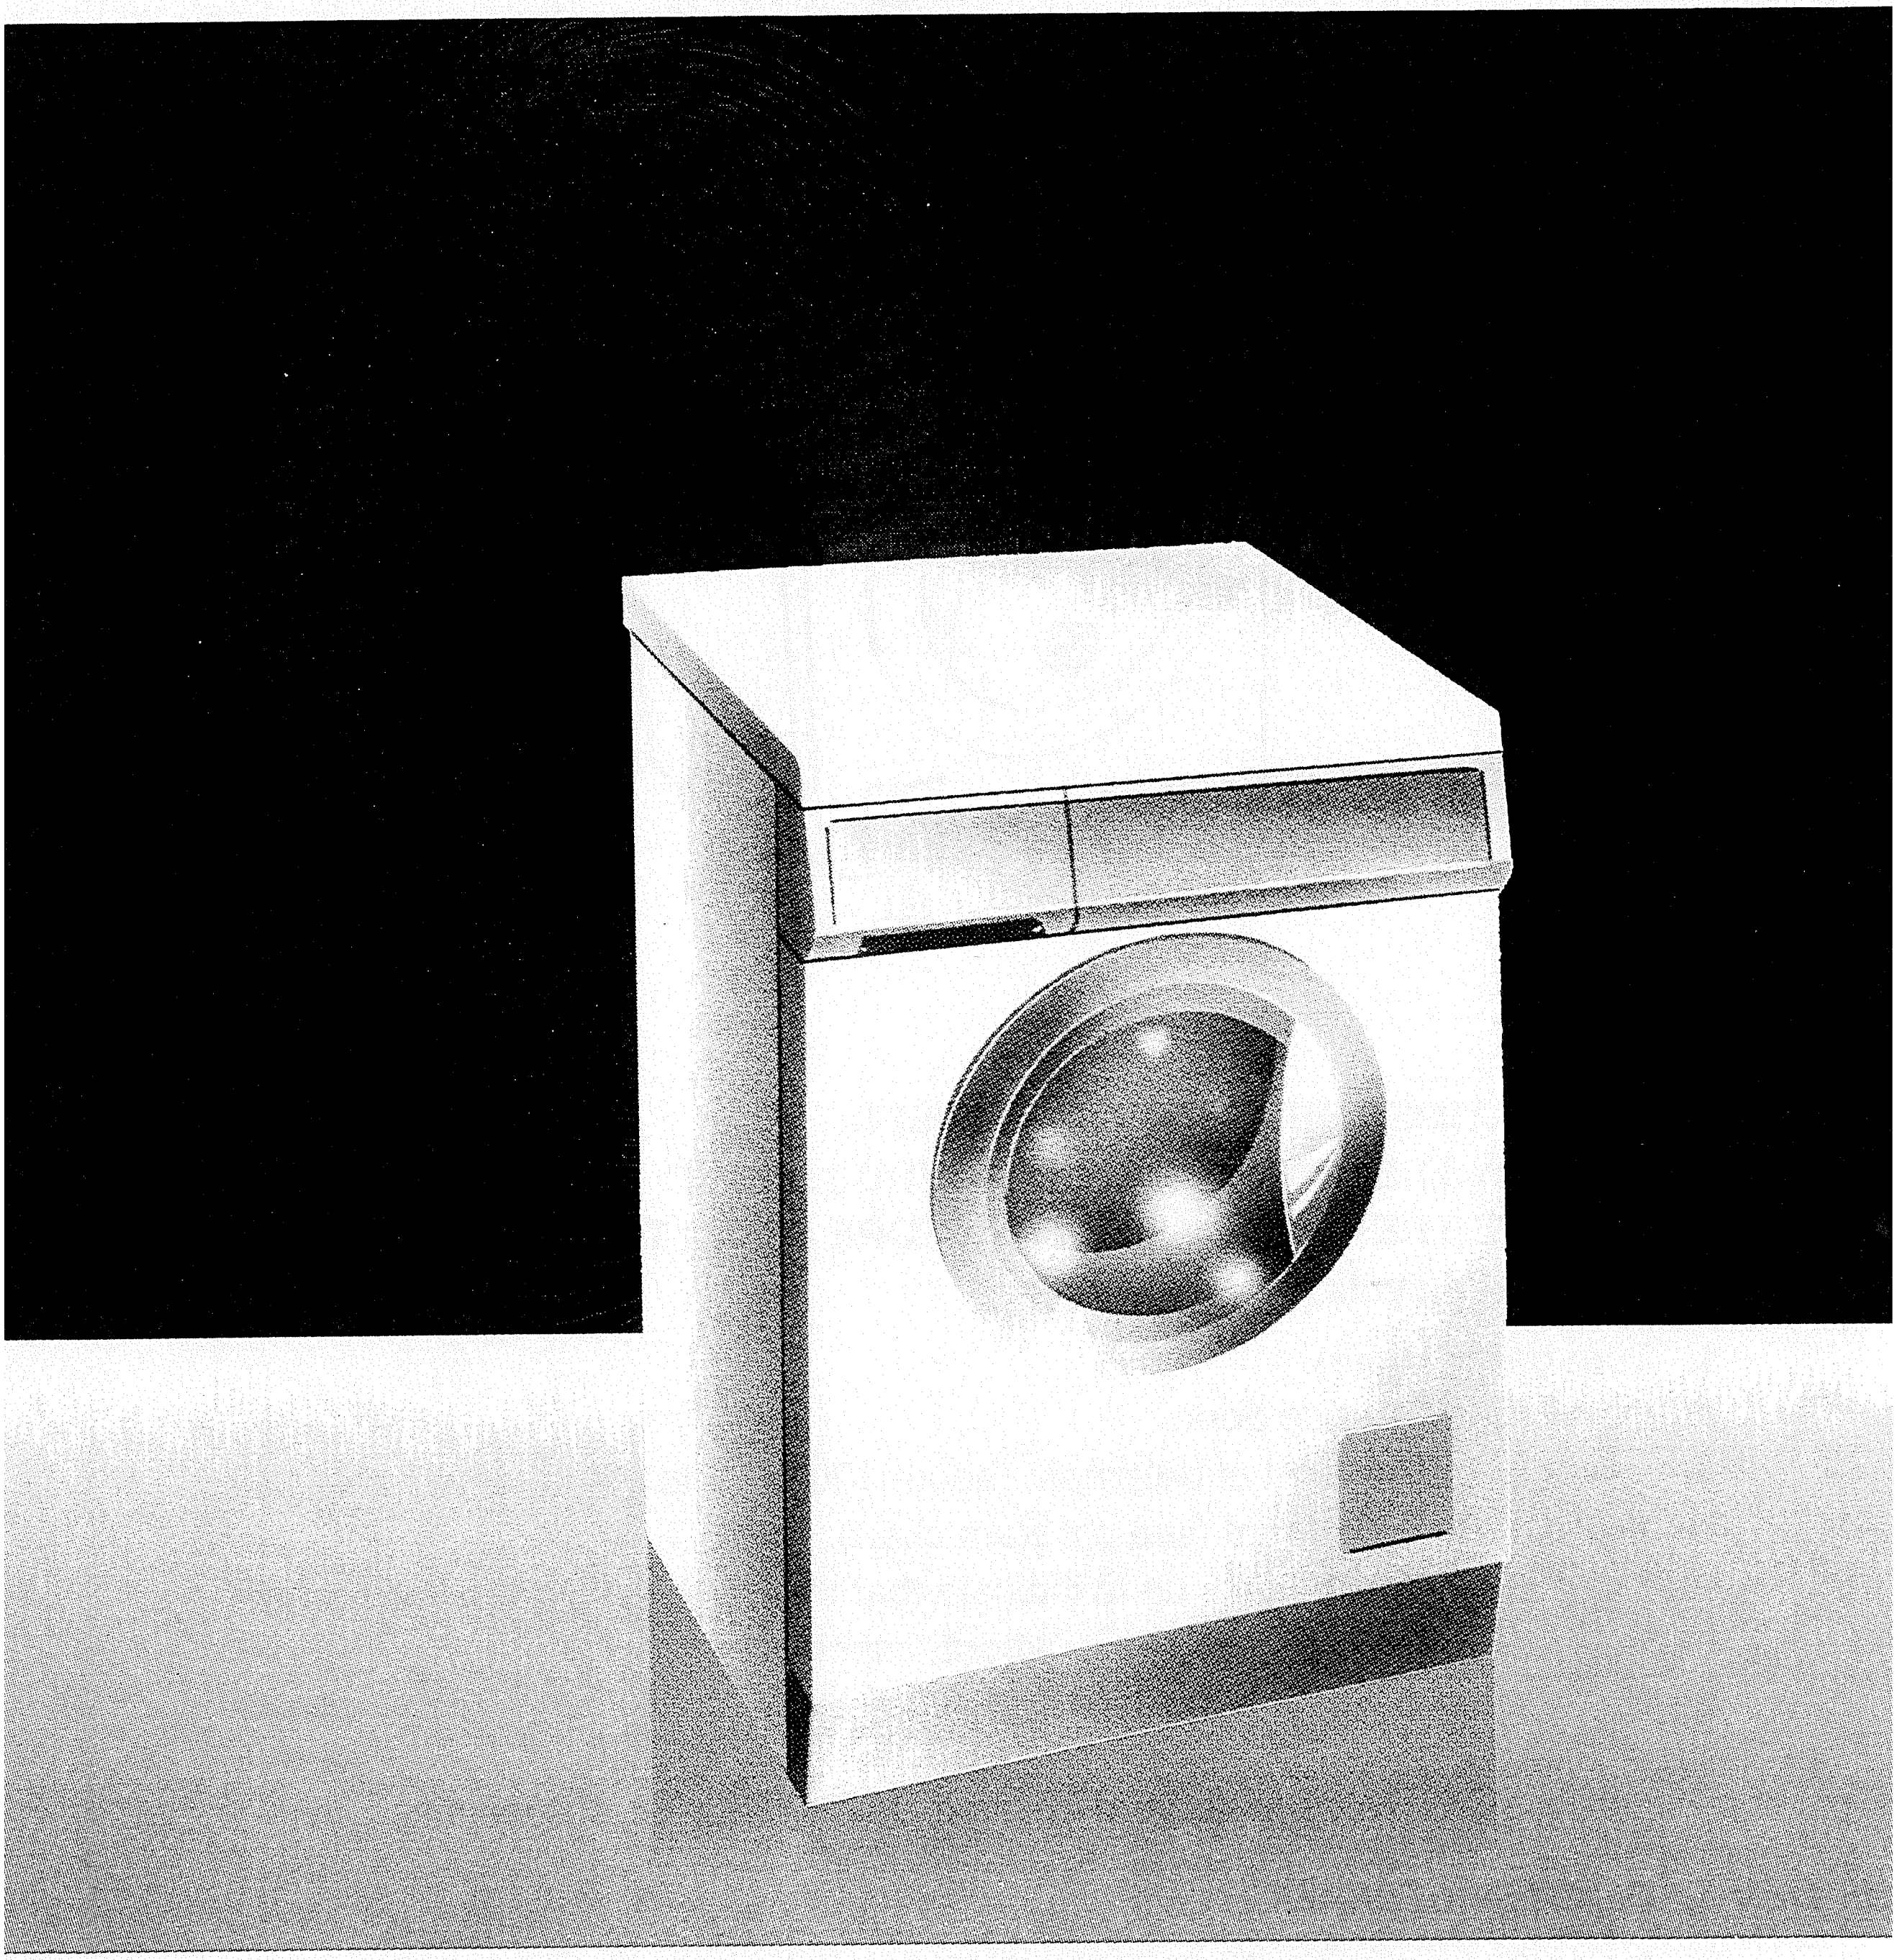

Bauknecht

QUICK REFERENCE GUIDE

THE FIRST TIME THE APPLIANCE IS USED:

- **FOLLOW THE “INSTALLATION INSTRUCTIONS”**
- **REMOVE THE TRANSIT BOLTS BEFORE USING THE APPLIANCE.**
- **First wash cycle without laundry:**

1. Turn on the tap(s).
2. Close the appliance door.
3. Pour a small amount of detergent (about 100 ml) into the detergent dispenser ⊔.
4. Select a short program (see program chart).
5. The Power On led lights up to indicate that the machine is switched on.
6. Hold down the “Start” button for about 1 second.

This initial cycle serves to eliminate any water remaining after your appliance was tested at the factory.

NORMAL DAILY USE:

1. Turn on the tap(s).
2. Sort the wash according to fabric type and colour and load the appliance.
3. Close the door.
4. Put in detergent and any additives you intend to use.
5. Select the programme, the temperature and any special options required.
6. The indicator above the "Start"-button flashes.
   Hold down the "Start"-button for about 1 second.

IMPORTANT:

During the first 15 minutes of the cotton and easy care/synthetic programmes (both without prewash) the door can be opened for adding laundry. This is not possible if “Short/Rapid wash” is selected.

CONTENTS

GB

APPLIANCE AND ACCESSORIES Page 24

PROTECTING THE ENVIRONMENT Page 25

SAFETY INSTRUCTIONS Page 25

TRANSPORT / HANDLING Page 25

PREPARING THE WASH Page 26

DETERGENT AND ADDITIVES Page 27+28

DYEING AND BLEACHING Page 28

SELECTING THE PROGRAMME/ STARTING THE PROGRAMME Page 28

SPECIAL OPTIONS Page 29

REMAINING TIME / PROGRAMME SEQUENCE INDICATOR Page 30

DOOR LOCK / PROGRAMME END Page 30

PROGRAMME RESELECTION / INTERRUPTING THE PROGRAMME Page 30

REMOVING THE FILTER / DRAINING RESIDUAL WATER Page 31

CARE AND MAINTENANCE Page 32

CHILD SAFETY Page 32

AUTOMATIC SAFETY FUNCTIONS / FAULTS Page 33+34

AFTER SALES SERVICE Page 34

INSTALLATION INSTRUCTIONS Page 35

APPLIANCE AND ACCESSORIES

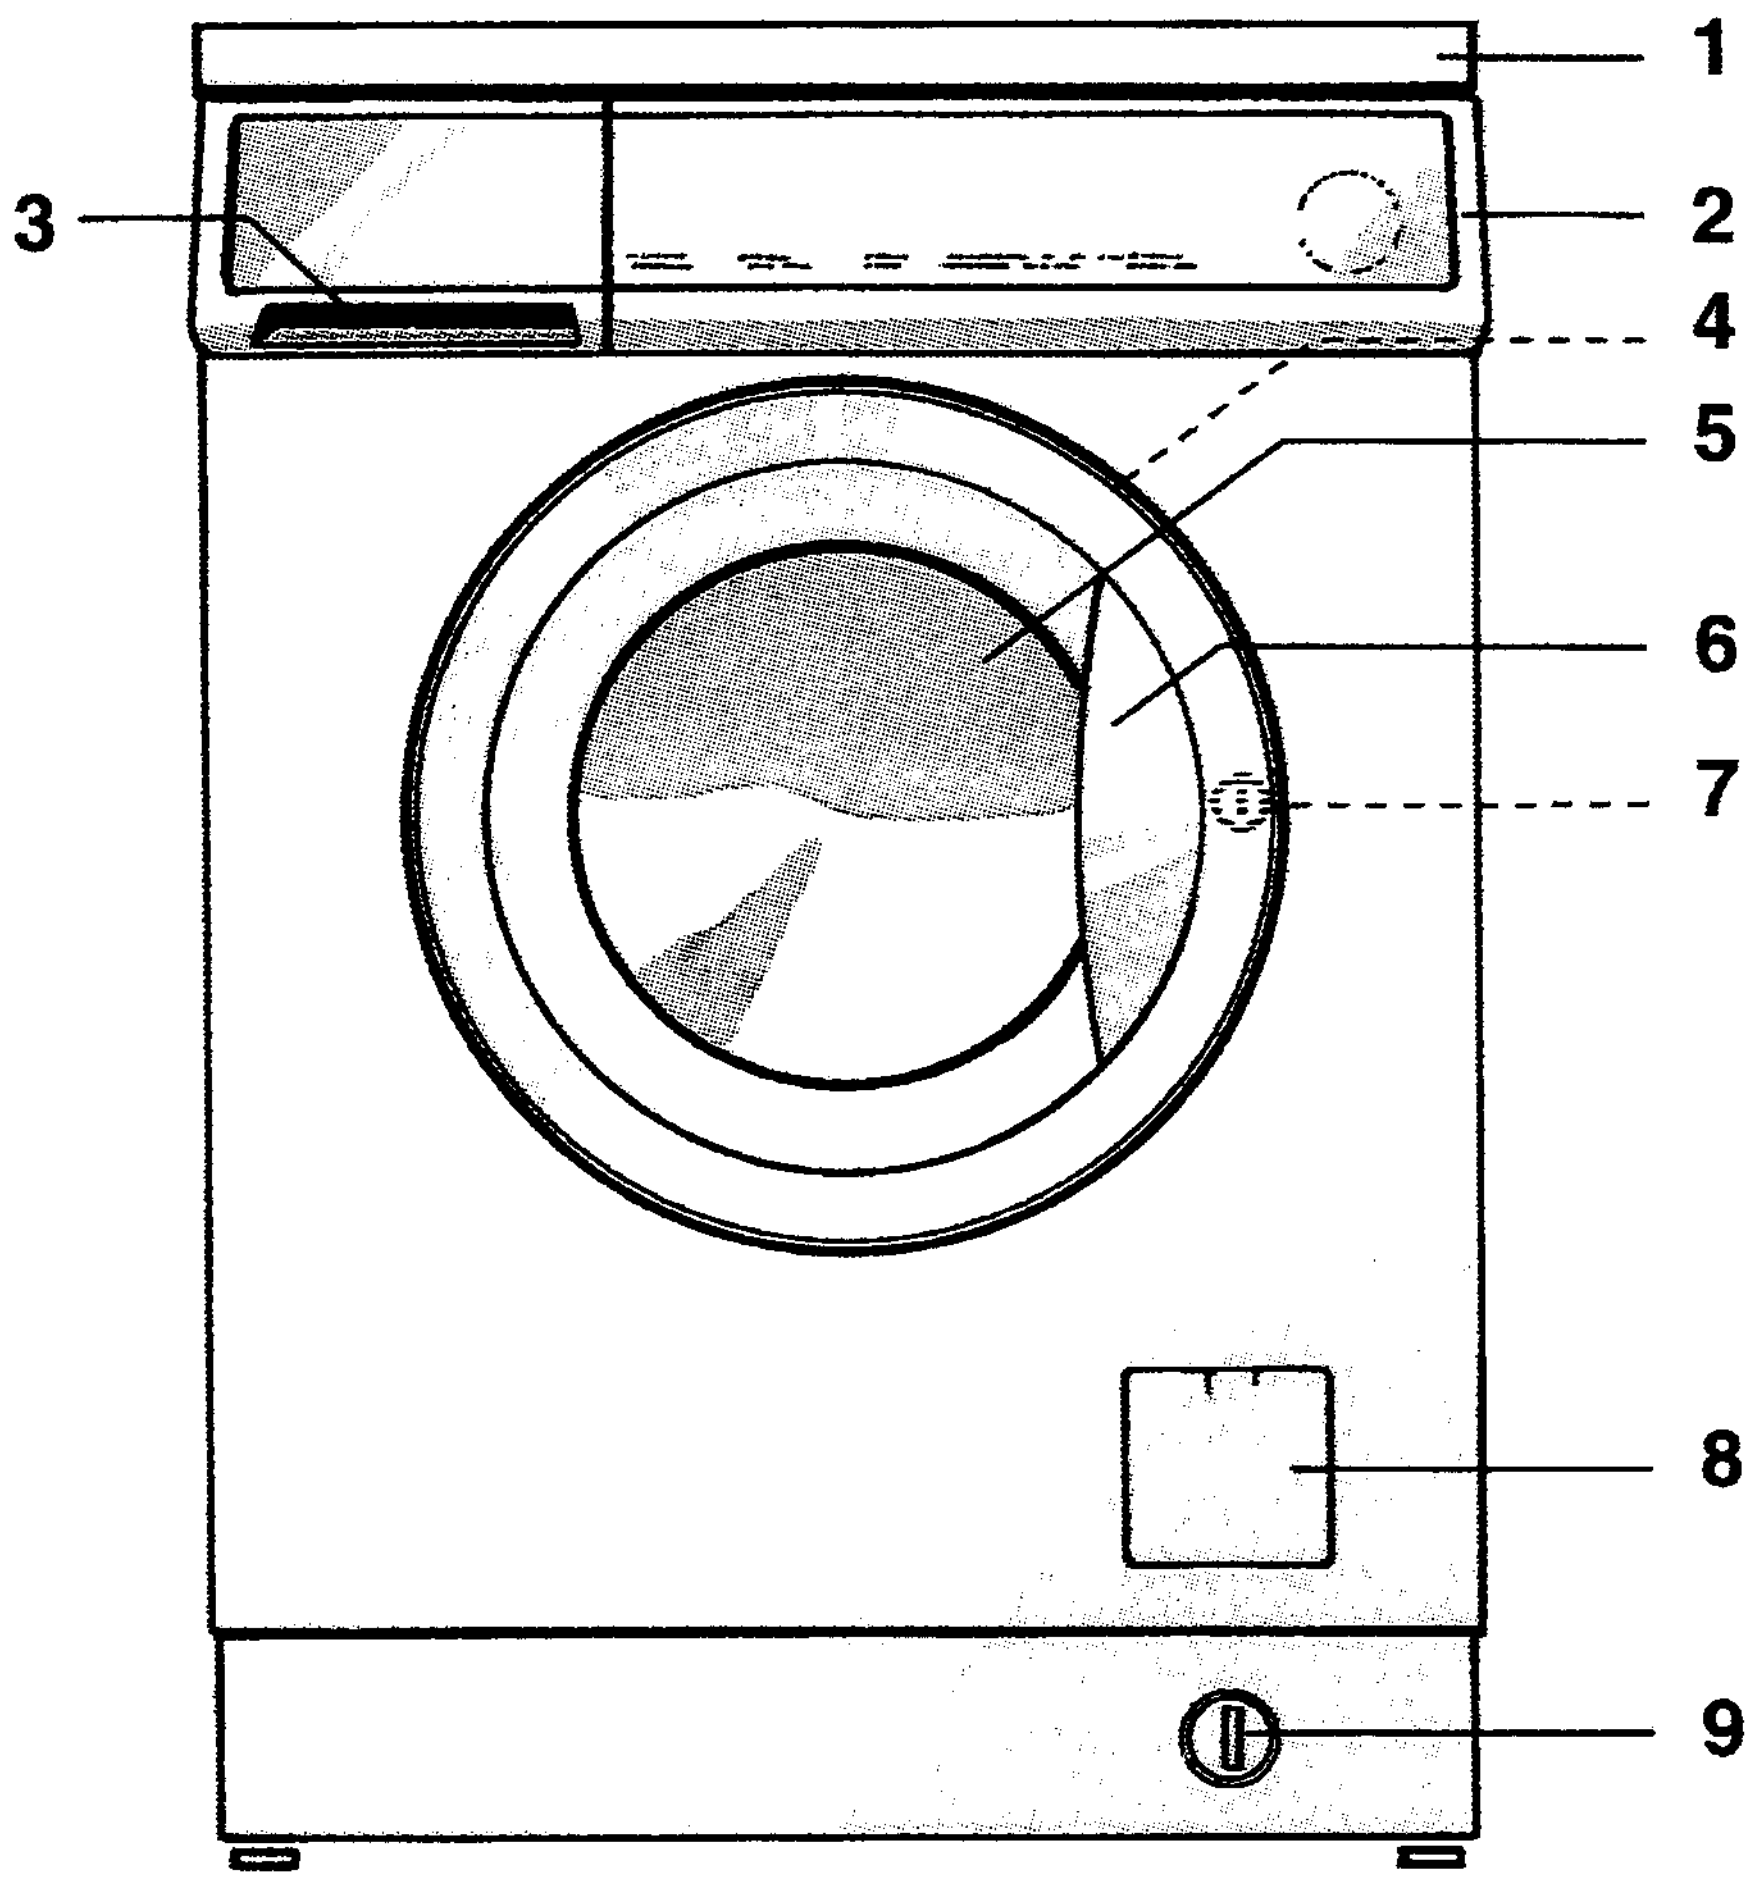

1. Worktop
2. Control panel
3. Detergent dispenser
4. After Sales Service sticker (inside door)
5. Door
6. Door handle
   - To open the door press the button on the inside of the handle and pull
   - Close the door by pushing it firmly (the lock will click into place)
7. Child safety (inside door)
8. Filter (behind cover)
9. Residual water drain (depending on model)

PROTECTING THE ENVIRONMENT

- **Packing**
  The packing material is 100% recyclable as indicated by the ♲ recycling symbol.

- **Appliance**
  The appliance is built from recyclable materials. If you decide to scrap the appliance ensure you observe local waste disposal bylaws.
  Before scrapping, pull out the plug and cut off the power cable so the appliance cannot be connected to the mains.

- **Environmental tips**

- If possible, always wash with a full load (depending on the programme) to save water and electricity.

- For a lightly to averagely soiled laundry, use a programme without a prewash cycle.

- Use low temperatures or short programmes for lightly soiled laundry.

- Press the “Saving half load/lightly soiled” button ½ (depending on model) when washing small loads, and reduce the amount of detergent.

- If you intend to dry the washing in a dryer, select maximum spin speed (depending on the selected programme) to reduce the electricity consumption of the dryer.

- Do not exceed the detergent doses indicated in the Manufacturer’s instructions.

- Use stain removal products or bleach only when strictly necessary.

SAFETY INSTRUCTIONS

- Use the appliance only for domestic washing and for its intended application.

- Ensure the installation and electrical and water connections have been made in accordance with the Manufacturer’s instructions and in observance of local safety regulations (refer to “Installation instructions”).

- Before cleaning or maintaining the appliance, switch it off or unplug it.

- When the appliance is not in use unplug it and turn off the tap(s).

- Do not attempt to force the door open.

- Do not allow children to play with the appliance or enter the drum. Do not rest any weight on the door.

- Packing materials can be dangerous for children: keep all packing materials (plastic bags, polystyrene, etc.) well out of their reach.

- The appliance conforms to European safety regulations and to Directive n. 93/68/EEC and standard EN 60555.

TRANSPORT / HANDLING

1. Unplug the appliance.

2. Turn off the tap(s).

3. Remove the water supply and drain hose.

4. Eliminate all water from the hoses and from the appliance (see “Draining residual water”).

5. Fit the transit bolts (obligatory) (see “Installation instructions”).

PREPARING THE WASH

1. **Sort the laundry according to...**

- **Type of fabric / care label symbol**
  Cottons, mixed fibres, easy care/synthetics, wool.
- **Colour**
  Separate whites and coloureds. Wash new coloured items separately.
- **Size**
  Wash items of different sizes in the same load to improve washing efficiency and distribute the load more evenly inside the drum.
- **Fabric delicacy**
  Wash delicate articles separately: use a special programme for Pure New Wool 🧶, curtains and other delicates. Always remove curtain glides or wash curtains with the glides inside a cotton bag. Only wash fabrics that are suitable for machine washing.
  Wash stockings, belts and other small items or articles with hooks (e.g. bras) in special cotton bags for washing machines or in zipped pillow cases.

2. **Empty pockets**
   Coins, safety pins and similar can damage your laundry and the appliance drum and tub.
3. **Fasteners**
   Close zips and fasten buttons or hooks; loose belts or ribbons should be tied together.

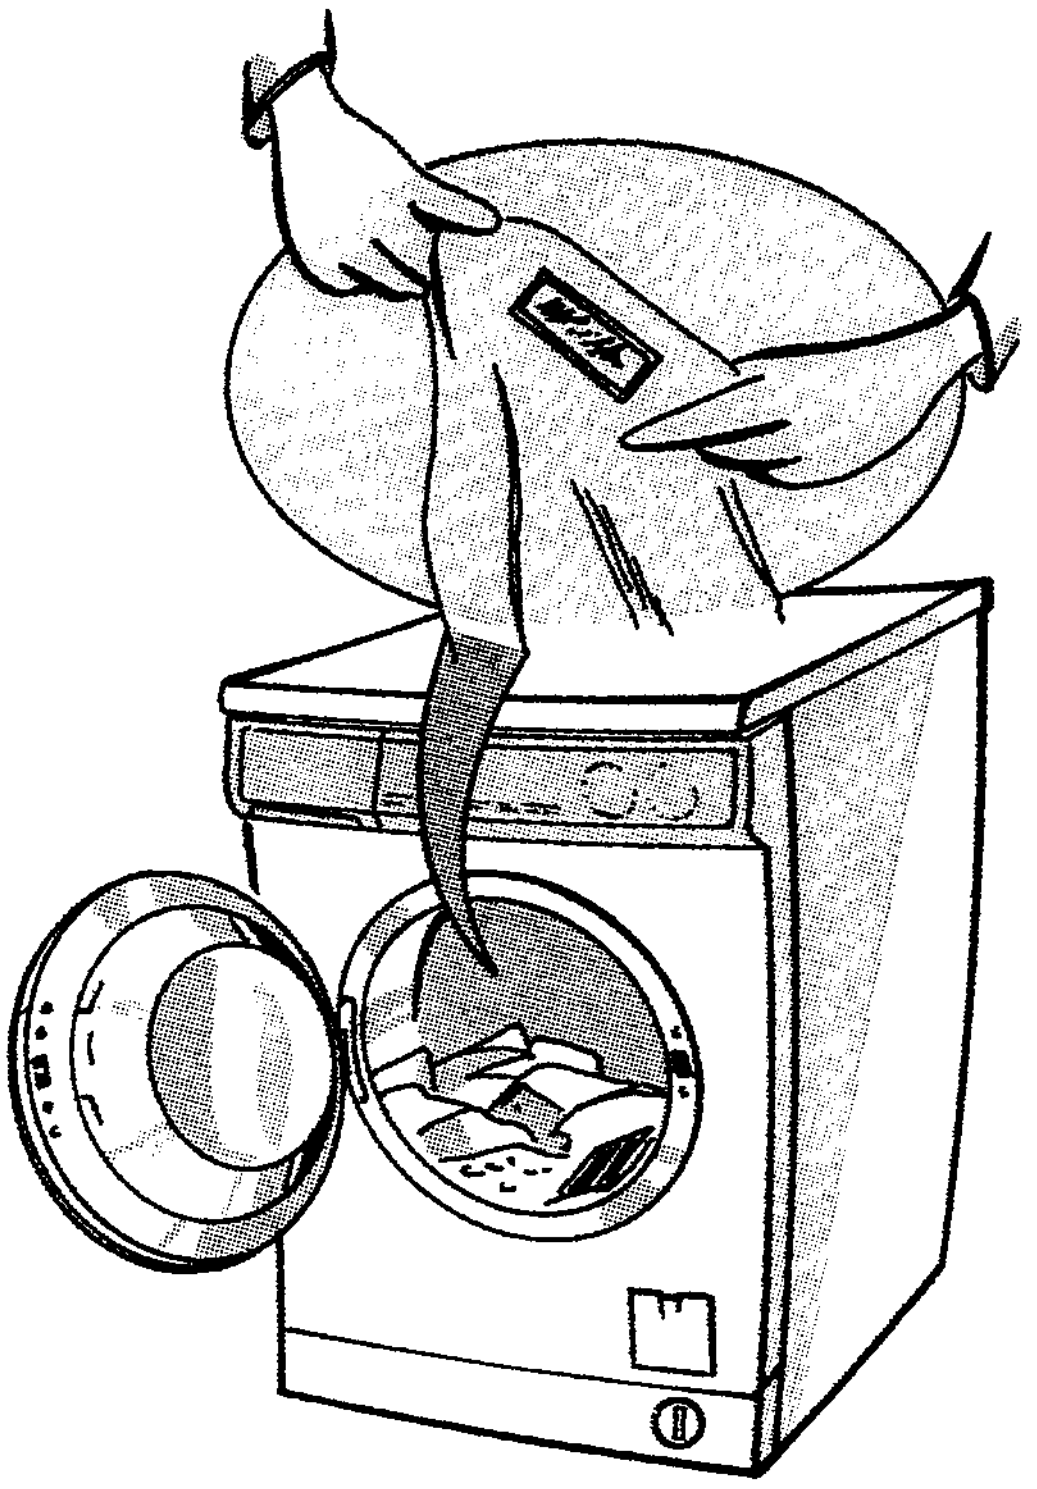

STAIN REMOVAL

- Blood, milk, egg and other organic substances are generally removed by the enzyme phase of the programme.
- To remove red wine, coffee, tea, grass and fruit stains etc. add a stain removing agent in detergent dispenser compartment ⊔.
- Particularly stubborn stains should be treated before the wash.

LOADING THE LAUNDRY

① Open the door.

② Unfold the laundry and place it loosely in the drum.

③ Close the door.

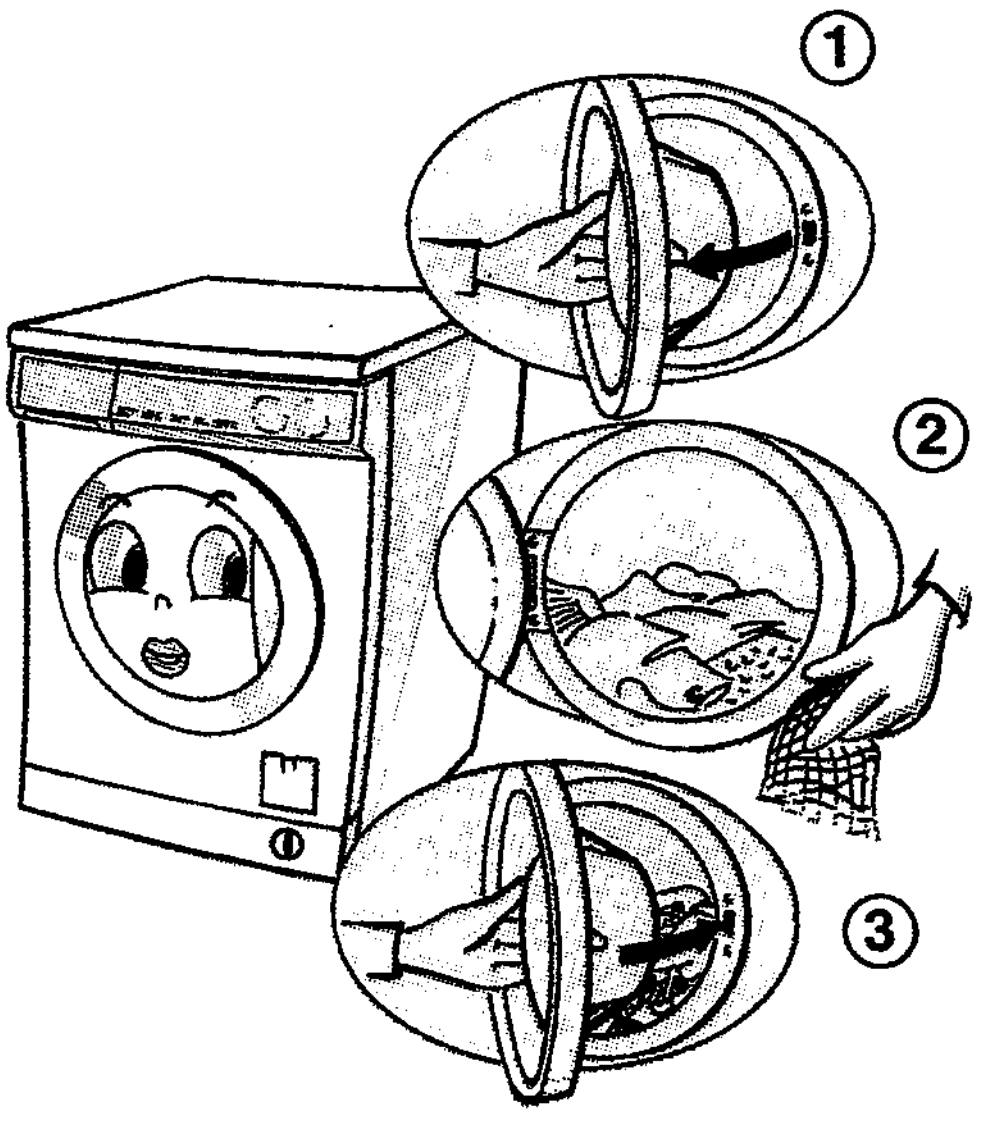

RECOMMENDED LOADS

See separate programme chart.

Note: Overloading will result in unsatisfactory washing results and creased laundry.

DETERGENT AND ADDITIVES

CHOOSING THE RIGHT DETERGENT

The type of detergent depends on:

- type of fabric (cottons, easy care/synthetics, delicate items, wool)
  Note: use only specific detergents for wool.
- colour
- washing temperature
- degree and type of soiling

Notes:

- Whitish residues on dark fabrics are caused by insoluble water softeners used in modern phosphate-free powder detergents.
  If you notice this problem, shake or brush the affected items or use a liquid detergent.
- Keep detergents and additives in a dry place and out of reach of children.
- Use only detergents and additives specifically produced for domestic washing machines.
- If you use water softeners, descaling agents, dyes or bleaches, make sure they are suitable for washing machine use.
- Do not use solvents (turpentine, benzine, etc.). Do not machine wash fabrics that have been treated with solvents or flammable liquids.

DOSAGE

Follow the instructions on the detergent pack in relation to

- the degree and type of soiling
- the size of the load
  - full load: follow the detergent manufacturer's instructions
  - half load: 3/4 the amount used for a full load
  - minimum load (about 1 kg): half the amount used for a full load
- water hardness in your area (ask for information from your water company): soft water requires less detergent than hard water.

Notes:

- Too much detergent can result in excess foam formation, which reduces washing efficiency. If the appliance detects excessive foam it may prevent spinning.
- The laundry will become grey if you use too little detergent. Too little detergent will also lead to increased scale deposits on the heating element and drum.

WATER HARDNESS

Water hardness class	Characteristics	German scale °dH	French scale °fH	Clarke scale °eH
1	soft	0-7	0-12	0-9
2	average	7-14	12-25	9-17
3	hard	14-21	25-37	17-26
4	very hard	over 21	over 37	over 26

Adjust the water hardness level pointer in the detergent dispenser in accordance with the hardness of the water in your area. Move the pointer sideways to the required position.

ADDING DETERGENT AND ADDITIVES

1. Pull out the detergent dispenser.
2. Add the detergent

- Programmes with pre and main wash |I| |II|
- Programmes without prewash, main wash only |II|
  When using liquid detergent, remove the coloured insert and fit it in compartment |II|. The graduated scale on the insert makes dosing easier.
- Fabric softeners, etc. (no more than the "max" mark) |✿|
- Stain remover agents |II|
- Anti-scale agents (water hardness 4) |II|
- Starch (dissolved in water) |✿|

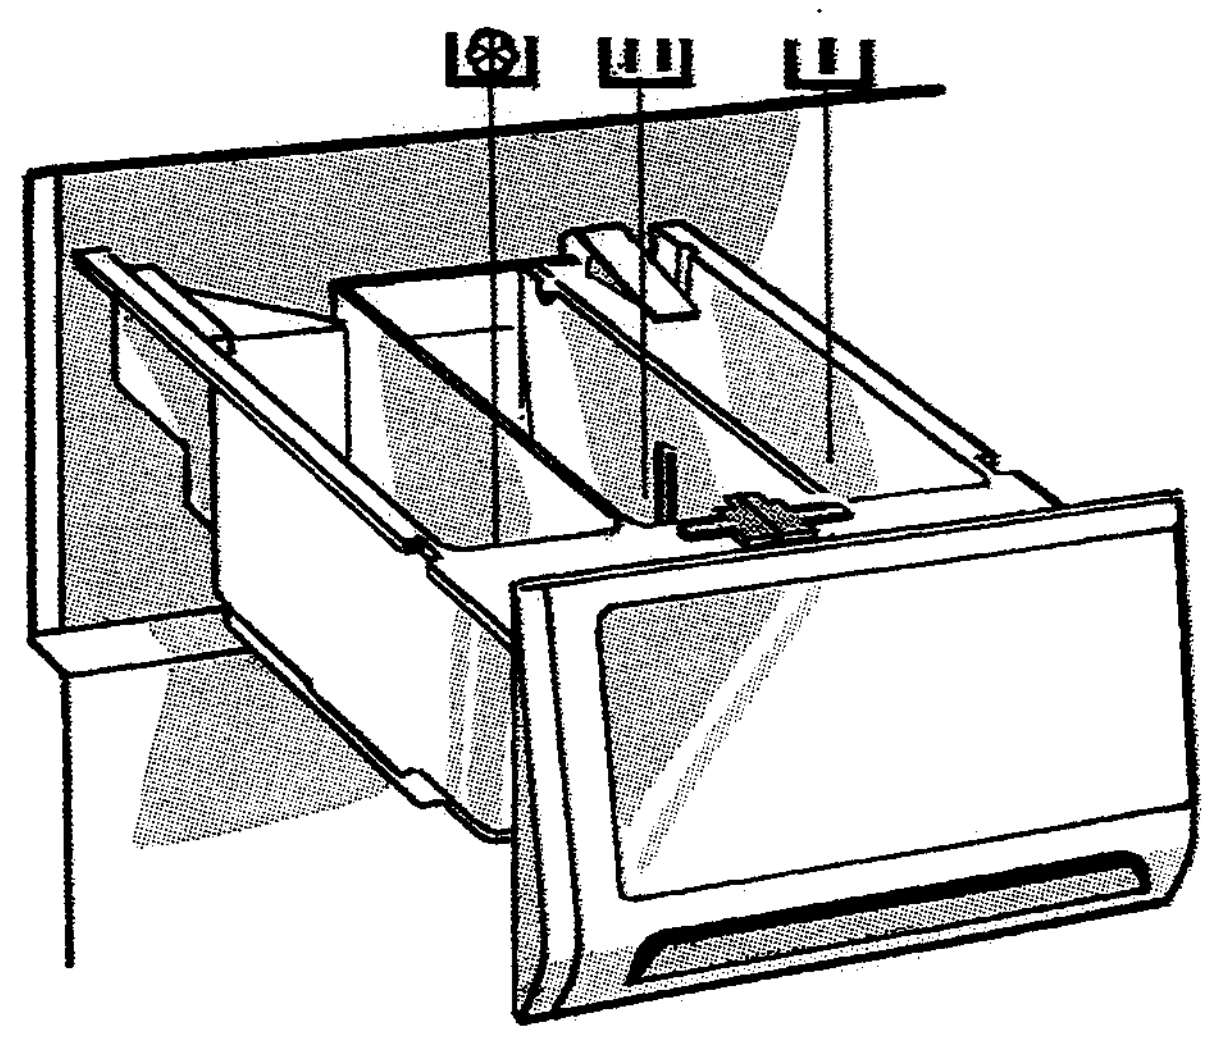

DETERGENT AND ADDITIVES

3. Close the detergent drawer completely.

Notes:

- To prevent dispensing problems when using highly concentrated powder and liquid detergents, use the special detergent ball supplied with the detergent and place it inside the drum.
- You can use liquid detergent in the prewash phase for programmes with this special option. In this case use only powder detergent for the main wash.
- If the start delay option is used, put liquid detergent into the drum with a detergent ball.
- When using concentrated fabric softeners, add water in the detergent dispenser up to the "max." level mark.

DYEING AND BLEACHING

Dyeing: Usual products consist of dye colour, fixing agent and salt. Pour the dye colour, the fixing agent and then the salt directly into the empty drum. Fill in the laundry only afterwards.

- Use exclusively dyes and bleaches recommended for washing machines.
- Follow the Manufacturer's instructions.
- Plastic and rubber parts of the machine may be stained by dyes or bleaches.

SELECTING THE PROGRAMME/ STARTING THE PROGRAMME

(refer also to the separate programme chart and the power/water consumption data table)

1. Open the tap(s).
2. Turn the programme selector to the desired programme with the appropriate temperature. The pilot lamp lights up to indicate that the appliance is switched on. The remaining time indicator (depending on model) shows the programme duration (see "Remaining time/ Programme sequence indicator").
3. Select special options as desired (depends on model). The selected options are indicated by indicator leds.
An alarm will sound if an incorrect combination of programme and option is selected. Incorrect combinations of special options are automatically deselected.
4. The indicator above the "Start"-button flashes. Hold down the "Start"-button for about 1 second. (If "start delay" is in use, the start delay indicator flashes. The start delay button below the digital indicator can be used to switch from "Remaining time" in minutes to "Start delay" in hours. See special option "Start delay".

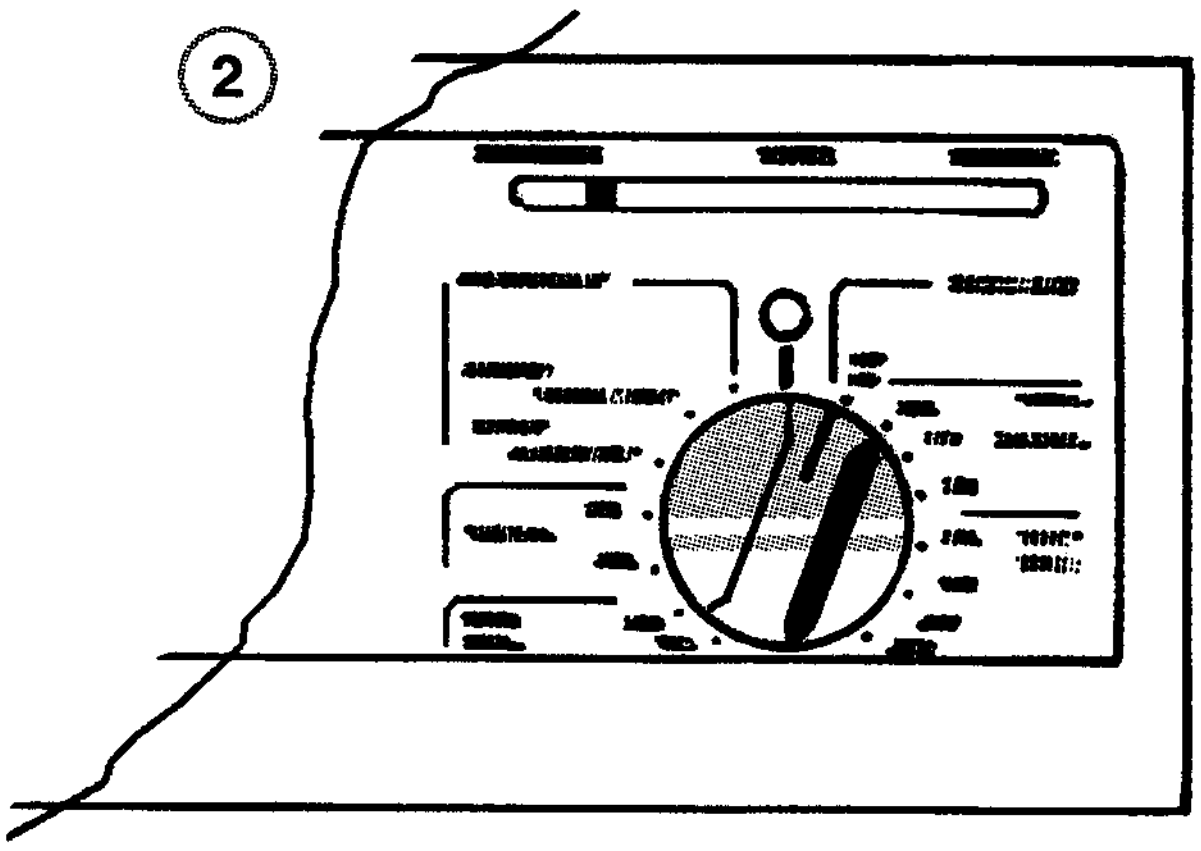

SPECIAL OPTIONS

(Depending on model, also see the separate programme chart)

- An alarm will sound if an incorrect combination of programme and option is selected. Incorrect combinations of special options are automatically deselected.
- All special options can be canceled together by setting the programme selector to "Drain" for about 1 second.

Spin speed button

- Press the button to set the spin speed.

Indication:

The selected spin speed indicator lights up.

Note: every programme has an automatic maximum spin speed.

Programme	MAX. SPIN SPEED (RPM) (according to model)				
Cotton	1400	1300	1200	1100	1000
Cotton coloured	1400	1300	1200	1100	1000
Easy care/Synthetics	900*	900*	900*	900*	900
Delicate	900*	900*	900*	900*	900
Wool	900*	900*	900*	900*	900
Rinse + spin	1400	1300	1200	1100	1000
Gentle spin	900*	900*	900*	900*	900

* For improved garment care, spin speed is limited to 900 rpm (indicates 1000 rpm).

Prewash button

- Use the prewash option only for a heavily soiled wash (e.g. sand, stubborn soil).
- The prewash option adds about 15 minutes to the programme time.

Rinse hold button

- The laundry remains in the drum in the rinse water without progressing to the spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for programmes for wool, easy care (synthetics) and delicates or if the laundry cannot be removed as soon as the programme comes to an end.
- To terminate the rinse hold option:
  Press the Rinse hold button again; the corresponding lamp goes out and the programme will terminate automatically with the spin cycle for the preset wash programme.

Short (rapid wash, quick wash) button (if available) /

- For quick, low-cost washes.
- Ideal for minimum loads of lightly-soiled articles.

Energy save button/Eco (if available) e

- The wash time is extended and the water temperature is reduced. This option saves about 30% in energy without compromising the excellent results of the wash.

Intensive rinse (extra rinse) button (if available)

- A further rinse cycle is run.
  This improves rinsing efficiency.
- The intensive rinse option is particularly suitable for areas with very soft water and when washing baby linen and helps people with allergies.

Start delay (if available)

- Press the "Start delay" button under the digital display. The digital display sets itself to zero and the "Start delay" indicator lights up.
- The start delay time can be set from 1 to 19 hours in advance: hold down the "Start delay" button or press it repeatedly until the desired number of hours appears on the digital display. If the setting exceeds the maximum of 19 hours, the timer starts at 0 next time the button is pressed
- After having selected the programme and special options, hold down the "Start" button for about 1 second. The time remaining to the programme start is shown in realtime.
- The start delay setting can be corrected after the "Start" button has been pressed. As before, press or hold down the button until the desired number of hours is displayed
- Deleting "Start delay": To cancel "Start delay" hold down the "Start delay" button until "0" is displayed. After about 2 seconds the remaining time will be displayed.

Notes:

- When using this option, use a detergent ball if liquid detergent is used and place it directly in the drum.
- "Start delay" cannot be used in combination with the "Rinse Spin", "Gentle spin" and "Drain" programmes.

REMAINING TIME / PROGRAMME SEQUENCE INDICATOR

REMAINING TIME INDICATOR (if available) ⏲

- Two digit remaining time display. If "Start delay" is used, the remaining time is displayed only after the programme has actually started.
- If a programme lasts longer than 99 minutes, the figure 99 will be displayed until the remaining time drops below 99 minutes.
- The washing machine is fitted with **Fuzzy-Logic-Technology**. The appliance adapts optimally to the current conditions in such a way as to optimise consumption even with light loads. The supply water temperature, supply pressure, water level and load quantity are used as parameters in this calculation. These factors all influence the programme time. The remaining time indication is checked and displayed during certain programme steps. For this reason the remaining time will not be displayed in continuous steps.

PROGRAMME SEQUENCE INDICATOR

Indicates the current programme step.

The indicator moves from left to right after the programme start through "wash", "rinse" and "spin". At the end of the programme the indicator returns to its initial position on the left side.

DOOR LOCK / PROGRAMME END

DOOR LOCK

When you start the programme the door is automatically locked until the programme terminates. “Door free” indicator switches off.

Exception: When running the cotton and easy care/synthetics programmes (without prewash) the door can be opened for adding further laundry during the first 15 minutes. If "Short/Rapid wash" has been selected, however, this is not possible.

If the programme selector is set to "0" or the power supply is cut off, the door unlocks automatically after about 2 minutes.

PROGRAMME END

1. Programme end is indicated by the fact that
   - the "door free" indicator lights up
   - the programme sequence indicator is no longer visible
   - the remaining time indicator is displaying "00"
   - a short buzzer tone sounds.
2. Deselect the selected special options by pressing the appropriate buttons again.
3. Set the programme selector to "0". The pilot lamp switches off.
4. Open the door and remove the load.
5. Turn off the tap(s).

Note: Leave the door ajar so that the drum can dry.

PROGRAMME RESELECTION / INTERRUPTING THE PROGRAMME

PROGRAMME RESELECTION

a. CONTINUING WITH A NEW PROGRAMME.

1. Select the new programme.
2. The indicator above the "Start"-button flashes. Hold down the "Start"-button for about 1 second.

The new programme continues with the same step at which the previous programme was interrupted.

b. CANCELLING THE CURRENT PROGRAMME AND RESTARTING WITH A NEW ONE

Do not put more detergent into the machine for the new programme, since no water is drained when a programme is cancelled.

1. Hold down the "Start" button for 5 seconds, or until the programme control audibly restarts and the remaining time indicator displays "00".
2. Wait until the programme sequence indicator has returned to its initial (leftmost) position.
3. Set the programme selector to “0”.
4. Select the new programme and any special options desired.
5. The indicator above the "Start"-button flashes. Hold down the "Start"-button for about 1 second.

TO INTERRUPT/PAUSE A PROGRAMME

To interrupt a programme for a certain time and resume it later:

1. Set the programme selector to “0”.
2. After the desired time, reselect the programme.
3. Hold down the “Start” button for about 1 second.

TO STOP A PROGRAMME BEFORE THE END AND DRAIN

To stop a programme before it has finished and drain the water:

1. Set the programme selector to "Drain".
2. Hold down the "Start" button for about 1 second.
3. The programme sequence indicator returns to its initial (leftmost) position. The water drains.

REMOVING THE FILTER / DRAINING RESIDUAL WATER

WHEN SHOULD I REMOVE THE FILTER?

- Check the filter two or three times a year and clean it if necessary.
- Check the filter if the appliance is not draining properly or if it fails to perform spin cycles.
- Remove the filter if the pump is blocked by an object (buttons, coins, safety pins, etc.).
  IMPORTANT: make sure the water has had time to cool before draining the appliance.

REMOVING THE FILTER

1. Switch off the appliance (set the programme selector to "0".)
② Remove the coloured insert from the detergent dispenser and use it to open the filter cover.
3. Place a bowl beneath the filter.
④ Turn the filter slowly anti-clockwise until the grip is vertical; do not extract filter as yet.
5. Wait until all the water has drained out.
⑥ Now unscrew the filter completely and extract it.
7. Remove any foreign material from the filter.
⑧ Make sure the pump impeller is not obstructed.
9. Insert the filter and screw it fully down in a clockwise direction (until the grip is horizontal).
10. Close the cover.
11. Pour 0.5 l of water into the detergent dispenser to reactivate the "Eco System".
12. Select the programme and hold down the "Start" button about 1 second.

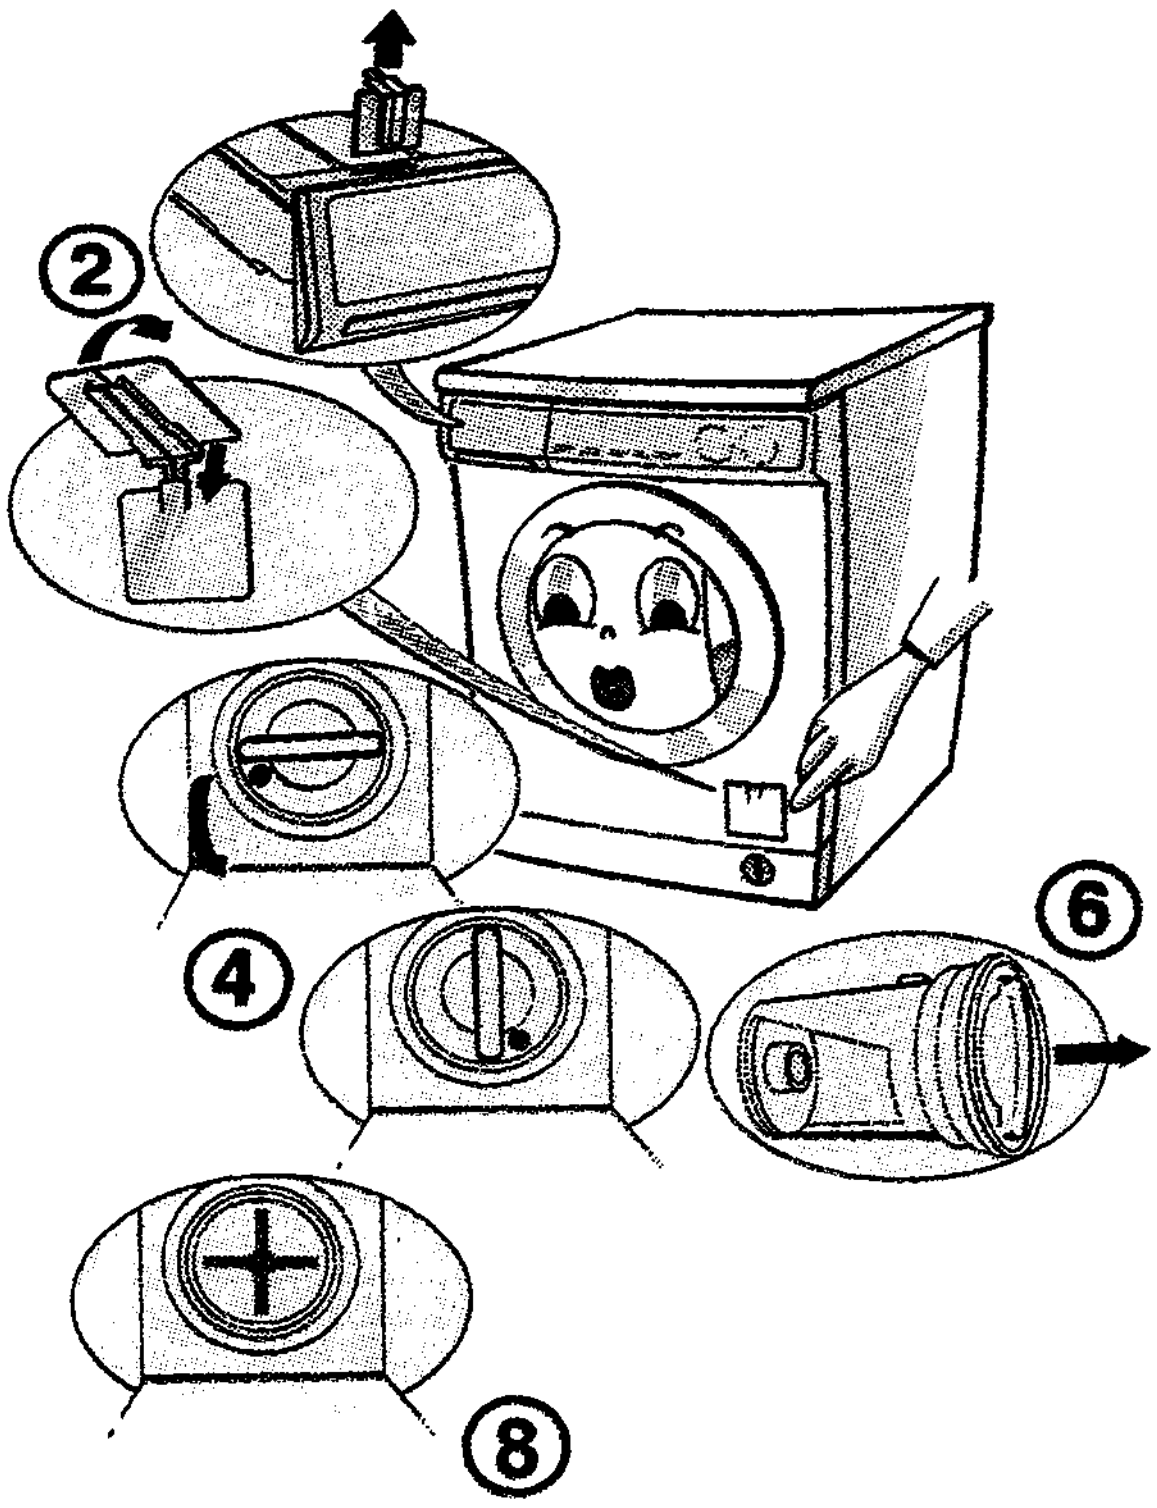

WHEN SHOULD I DRAIN RESIDUAL WATER?

- Before transporting (moving) the machine.
- If the appliance is installed in a room subject to sub-zero temperatures. It is best in this case to drain the machine after every wash.

DRAINING RESIDUAL WATER

The residual water drain hose is accommodated in the appliance plinth.

① Unscrew the plastic screw using the thin rounded projection on the coloured insert from the detergent drawer.

② Grip the end of the drain tube and pull out about a 12 inch length. Remove the cap from the end of the tube.

③ Allow all the water to flow into a flat bowl, then refit the plug and stow the drain tube back in its compartment.

4. Before using the machine again, pour about 1 litre of water into the detergent dispenser to reactivate the "Eco System".

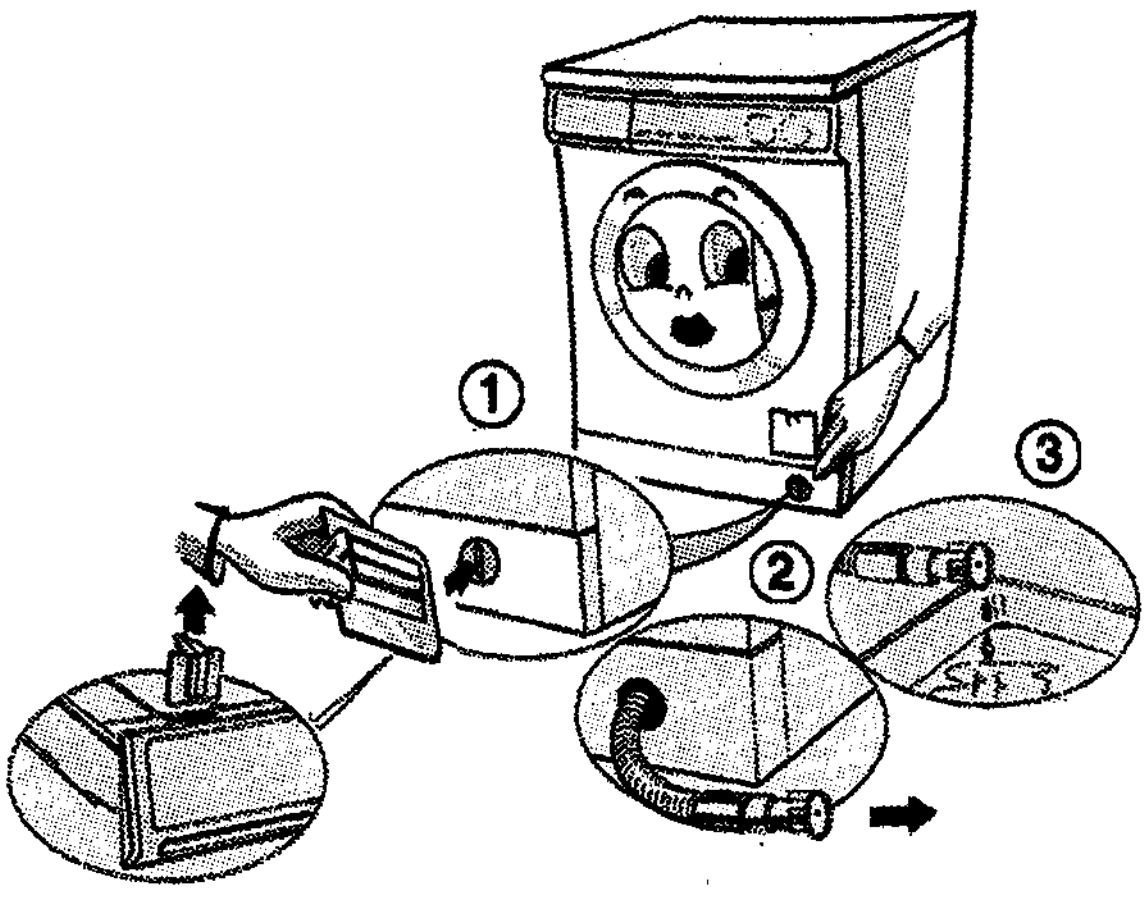

CARE AND MAINTENANCE

APPLIANCE EXTERIOR AND CONTROL PANEL

- Clean using normal household cleaner (do not use abrasive products).
- Dry with a soft cloth.

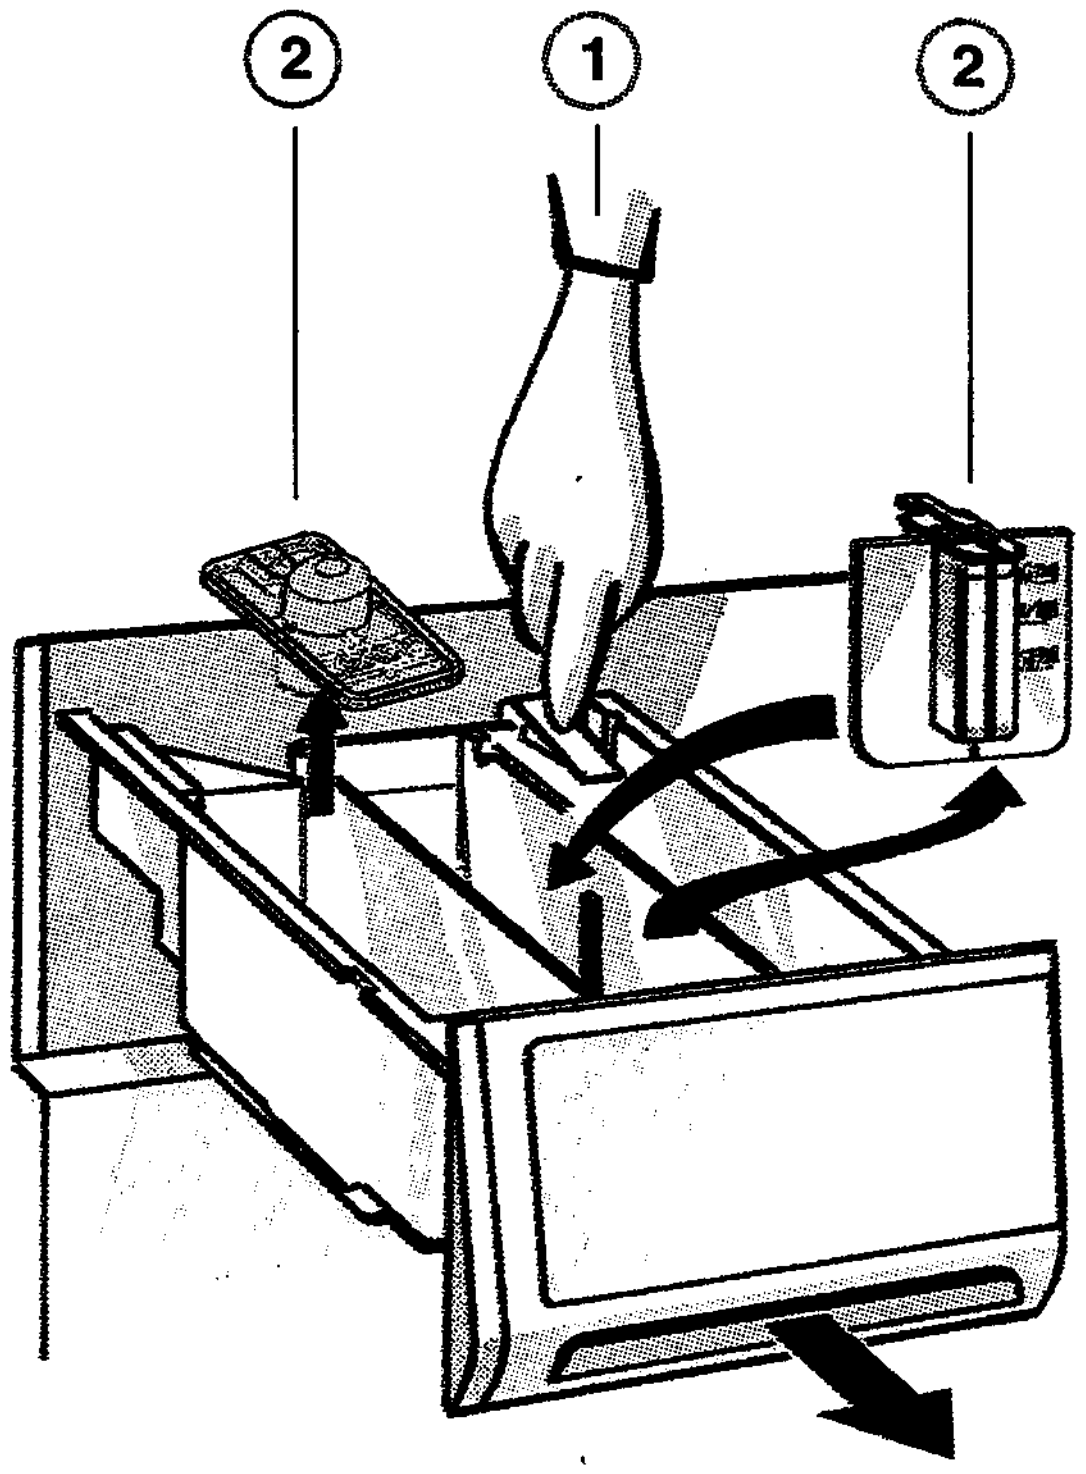

DETERGENT DISPENSER

① Disengage the detergent dispenser by pressing the release lever in the prewash compartment, and extract it.

② Remove the inserts (the siphon from the softener compartment and the insert for liquid detergents).

3. Wash all the parts under running water.
4. Replace the parts and refit the detergent dispenser. Push the siphon firmly into place.

DOOR SEAL

- Clean with a damp cloth when necessary.
- Periodically check the fold of the seal for foreign objects.

WATER HOSE MESH FILTERS

- Check and clean periodically.

For machines with a straight water supply hose (see figure)

1. Turn off the tap(s).
2. Unscrew the hose(s) from the tap(s).
3. Remove the mesh filter and clean it.
4. Refit the filter and screw the hose connection to the tap.
5. Unscrew the hose(s) from the machine.
6. Remove the filter from the washing machine with pliers and clean it.
7. Replace the filter and screw the hose connection back on to the machine.
8. Turn on the tap(s) and **ensure that the connections are completely water-tight.**

For machines with Water stop hose (see figure)

1. Turn off the tap.
2. Unscrew the hose from the tap.
3. Remove only the loose filter and clean it.
4. Refit the filter and screw the Water Stop hose to the tap.
5. Turn on the tap and **ensure that the connections is completely water-tight.**

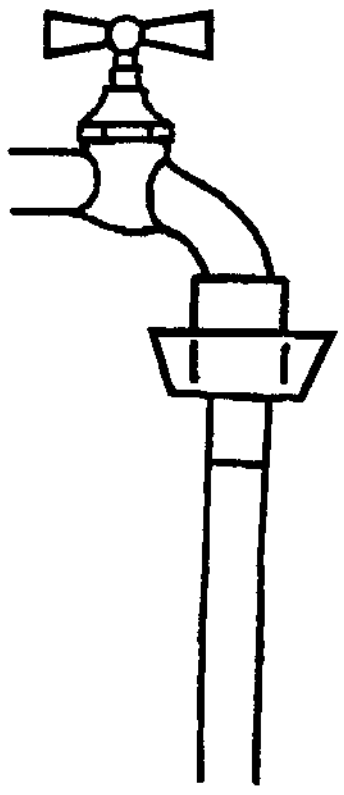
Straight hose

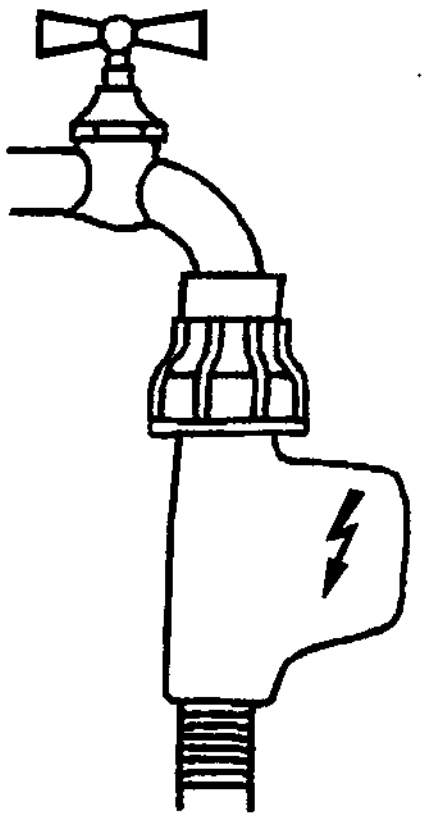
Water Stop hose

FILTER

Check and clean the filter two or three times a year (see “Removing the filter”).

CHILD SAFETY

To protect the appliance from improper use, turn the plastic screw on the interior of the door using a coin or the thick rounded plastic projection on the coloured insert from the detergent dispenser.

① Slot vertical: safety position, i.e. the door will not lock.

② Slot horizontal: normal position, i.e. the door can be locked again.

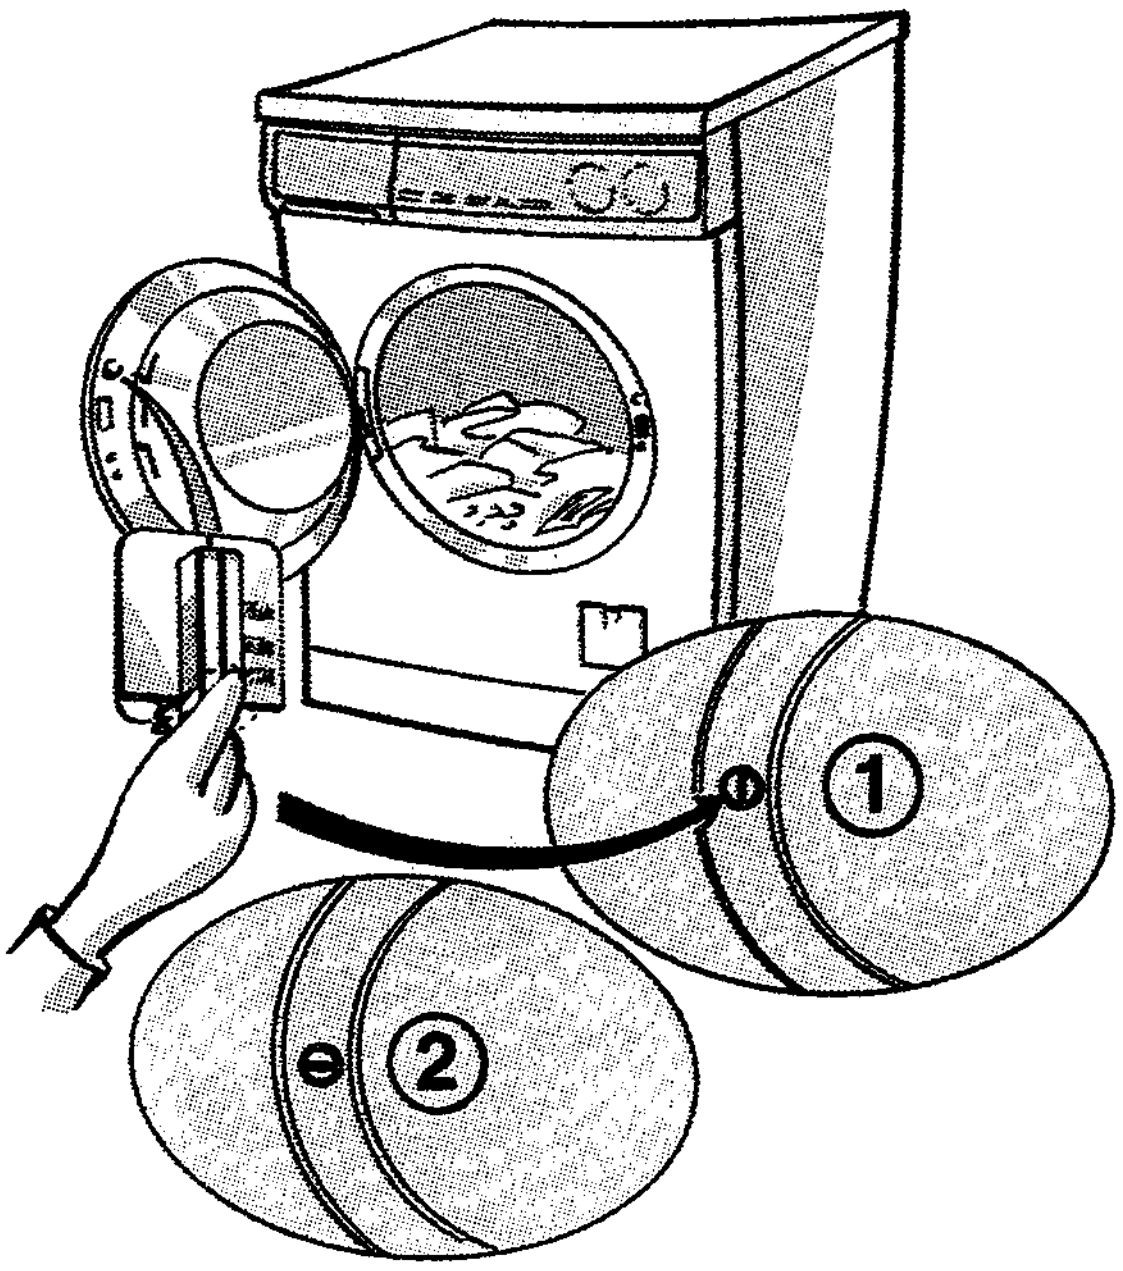

AUTOMATIC SAFETY FUNCTIONS / FAULTS

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately.

Often, however, the faults detected are small enough to be solved in a matter of minutes.
For example:

The machine will not start:

Check whether:

- the appliance is plugged in;
- the wall socket is functioning correctly (use a table lamp or similar);
- the appliance door is properly closed (child safety);
- a programme has been selected;
- “Start” has been pressed for 1 second (the lamp should light up and stop flashing).

The additive product is not being fully washed out of the detergent dispenser:

Check whether:

- the siphon is correctly installed and not blocked (see "Care and Maintenance / detergent dispenser");
- enough water is being supplied. The mesh filter in the water hose could be blocked or dirty. See "Care and Maintenance / Water hose mesh filters".

The machine is unstable during the spin cycle:

Check whether:

- the appliance is level and solidly installed on all four feet (see "Installation instructions");
- the transit bolts have been removed The transit bolts must be removed before the appliance can be used (see "Installation instructions").

The machine does not spin at the end of the programme:

- The appliance has an imbalance detection and correction system. If individual heavy articles are loaded (bathmat, bathrobe, etc.) this system may reduce the spin speed automatically to protect the appliance or even interrupt the spin cycle altogether, if the imbalance is too great even after several spin starts.
- If the laundry is still too wet at the end of the cycle, add smaller articles of laundry to balance the load and repeat the spin cycle.

The programme is interrupted, no fault indication, the light above the "Start" button is flashing

Was the programme changed on purpose?

- If yes: press the "Start" button 1 second to continue with the new programme.
- If it has been changed by accident (e.g. by a child): Reselect the previous programme and press the "Start" button for 1 second to continue the wash.

What should I do when the automatic safety system detects a malfunction?

The programme is interrupted and the fault is indicated as follows:

Indicators flashing	**Display field** (if available)	**Solution** Follow instructions given below...
"Start" and "Water Stop"	Remaining time (a number from 15 to 99)	"Water supply fault"
"Spin speed", "Remaining time", "Start delay", "Water stop"	E1	"Water supply fault"
"Spin speed", "Remaining time", "Start delay", "Water stop"	E3	"Draining fault "
"Spin speed", "Remaining time", "Start delay"	E4 or E5 or E6 or E7 or E8 or E9	"Electrical component fault"
Machines with Water stop: "Spin speed", "Remaining time", "Water Stop", "Start delay"	E2	"Water stop fault"

AUTOMATIC SAFETY FUNCTIONS / FAULTS

Water supply fault

- *The "Water stop" and "Start" indicators flash alternately*

or

- *the "Spin speed" and "Water stop" indicators flash. If the appliance is equipped with the Start Delay option, the "Start Delay" and "Remaining time" indicators also flash and the delay time display shows "**E1**".*

- Ensure the tap is on and the water mains pressure is correct.
- Ensure that the supply hose is not kinked.
- Clean the mesh filters if necessary (see "Care and Maintenance / Water hose mesh filters");
- The inlet hose is frozen.

Draining fault

- *The "Spin speed" and "Water stop" indicators are flashing; if the appliance is fitted with the Start Delay option the delay time display shows "E3". The water does not drain.*

Set the programme selector to "0".

Check whether:

- the drain hose run is kinked (see "Installation instructions"),
- The pump / filter are blocked (see "Removing the filter").
  IMPORTANT: Allow the water to cool before draining the appliance.
- The inlet hose is frozen.
- "Rinse Hold" has been selected.

Now reselect the desired programme and press the "Start" button. The programme will continue.

Electrical component fault

- *The "**Spin speed** " indicator is flashing. If the appliance is fitted with the Start Delay option the "Start Delay" and "Remaining Time" indicators also flash and the delay time display is showing "**E4, E5, E6, E7, E8 or E9**".*

Press the "Start" button again. The programme will continue.

If this fault indication recurs, contact After Sales Service (specify the fault, see "After Sales Service").

"Water stop" fault (depends on model)

- *The "**Spin speed**" indicator is flashing and the "**Water stop**" indicator is on. If the appliance is fitted with the Start Delay option the "Start Delay" and "Remaining Time" indicators flash and the delay time display is showing "**E2**".*

- Close the tap and unplug the appliance.
- The Water stop can be released by
  a) too much foam
  b) a leak in the water hose or appliance.
- Tilt the appliance forwards and let the water drain out.

Then:

- Plug the appliance back in,
- Turn on the tap (if the machine immediately fills with water before being switched on, there is a malfunction: turn off the tap and contact After Sales Service),
- Press the "Start" button again (do not fill with detergent).
  The programme will continue.

If the fault recurs, carry out the above steps again and contact After Sales Service (specify the fault, see "After Sales Service").

AFTER SALES SERVICE



Before contacting After-Sales Service:

1. try to remedy the problem yourself (see "Automatic safety functions / faults").
2. Restart the programme to check whether the problem has solved itself.
3. If the machine continues to function incorrectly, call After Sales Service

Specify:

- The nature of the problem.
- The exact model of the appliance.
- The service code (number after the word SERVICE).

SERVICE 0000 000 00000

The After Sales Service sticker is on the inside of the door.

- Your full address.
- Your telephone number and area code.

After Sales Service phone numbers and addresses are given on the guarantee card. Alternatively, consult the dealer where you purchased the appliance.

TRANSIT BOLTS

The appliance is fitted with transit bolts to prevent internal damage during transport.

Before using the machine you must remove the transit bolts (Fig. 1).

1. Slacken the four bolts with the spanner supplied (Fig. 2).
2. Unscrew the bolts by hand.
3. Holding the bolt head, pull each bolt through the wide part of the holes.
4. Close the holes with the plastic covers supplied; insert the covers in the wide part of the hole and slide them toward the narrow part until they click into place (Fig. 3).
5. Keep the transit bolts for future use.

Important

Whenever the appliance is transported, the transit bolts must be refitted.

Pry up the plastic covers with a screwdriver, slide them in the opposite direction to the arrow and remove. Insert the transit bolts, performing the steps for removal in reverse order.

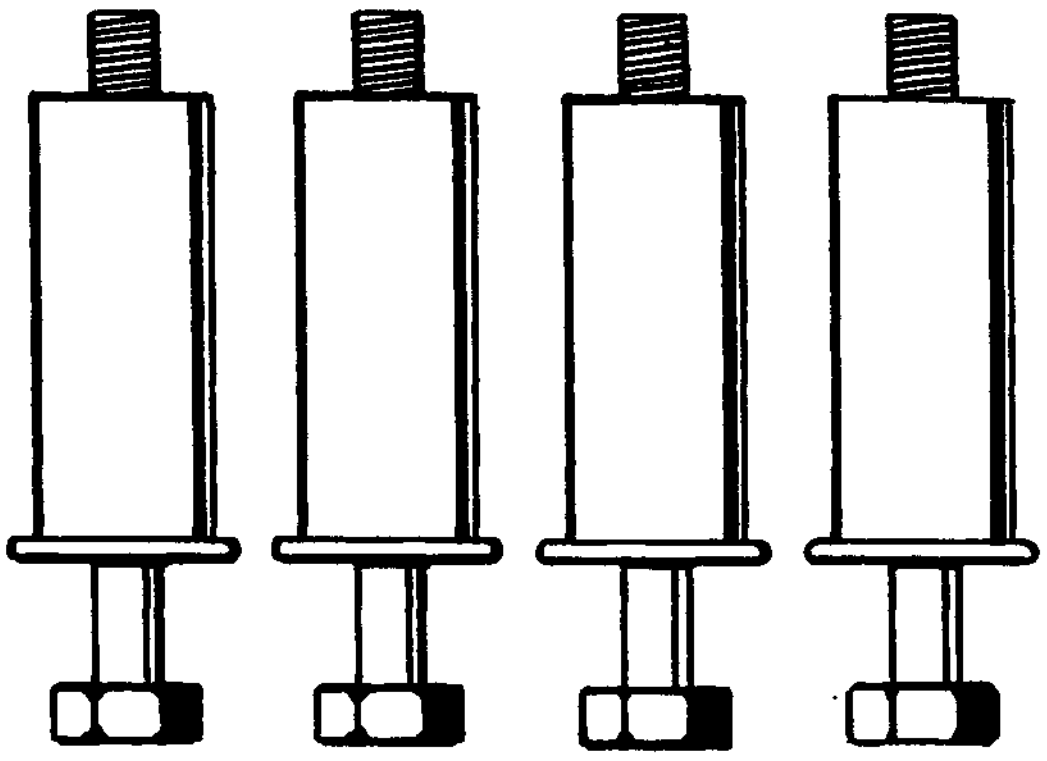

Fig. 1

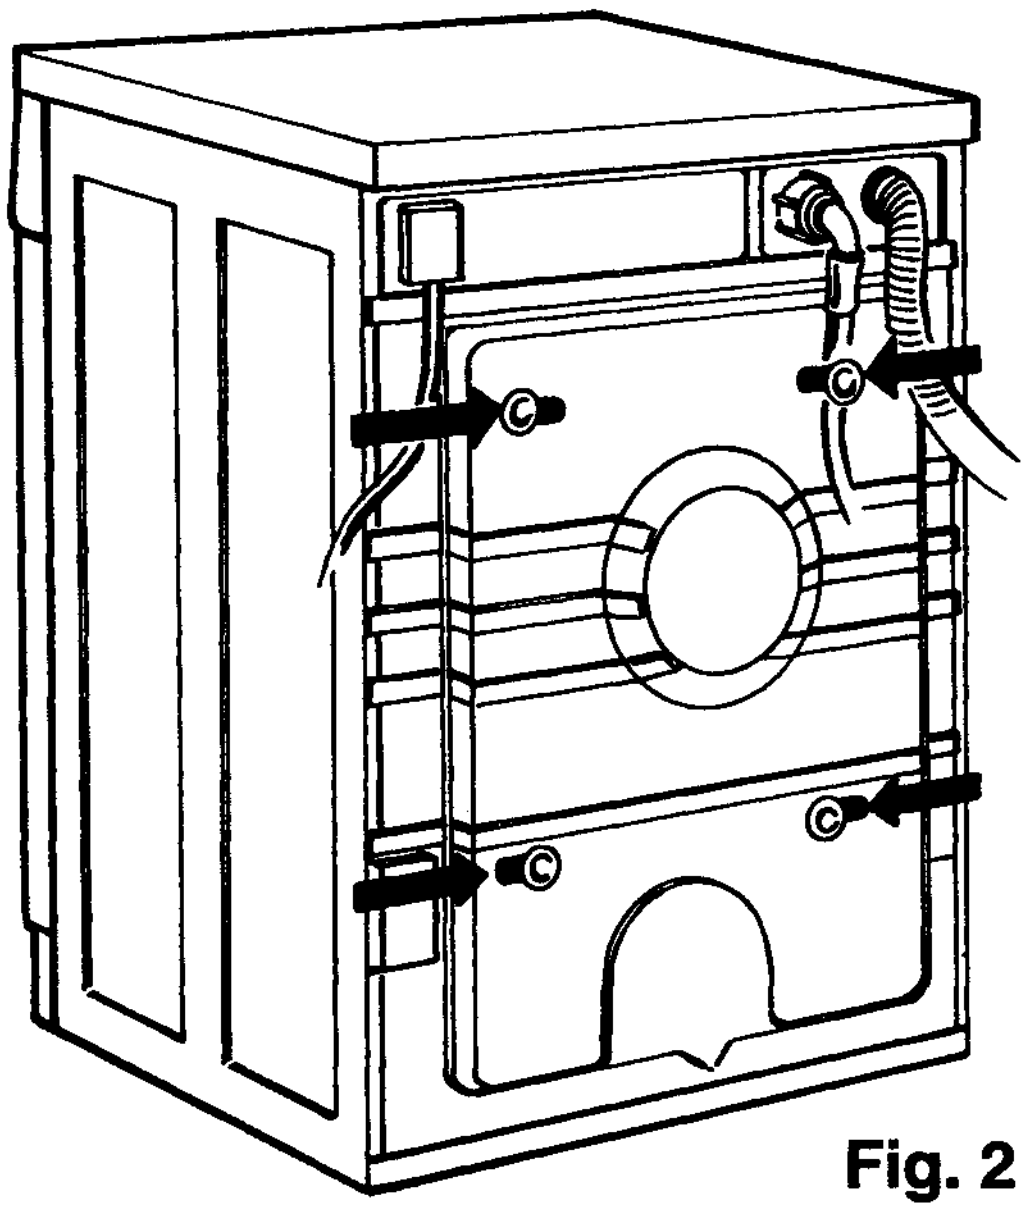

Fig. 2

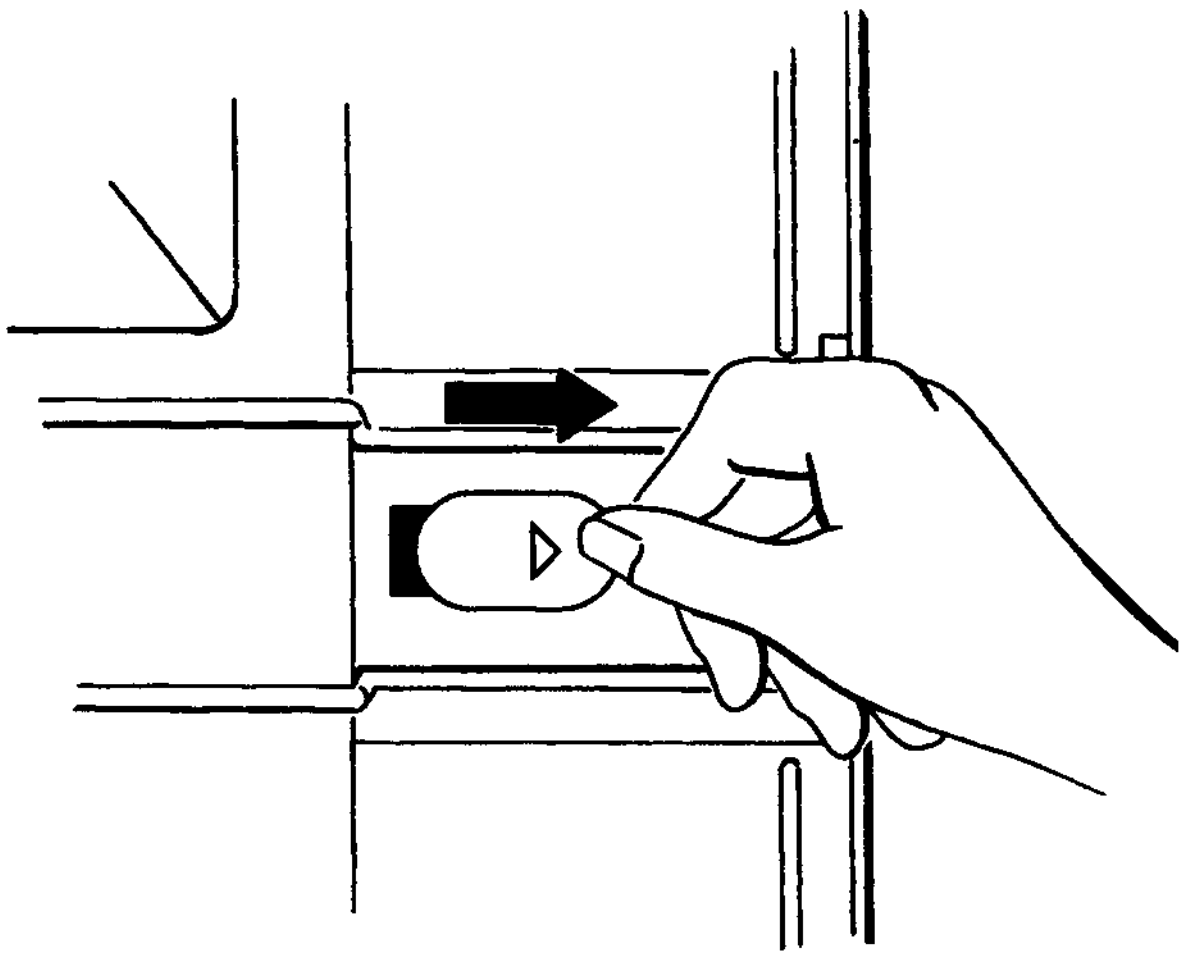

Fig. 3

INSTALLATION

- Install the appliance on a solid and level floor surface, preferably in a corner of the room.
- Make sure that all four feet are stable and resting on the floor and then check that the appliance is perfectly level (use a spirit level).
- If the floor is uneven, adjust the levelling feet as required (do not insert pieces of wood etc. under the feet):

① Slacken the locknut using the spanner supplied.

② Adjust the height of the foot, turning it by hand.

③ Tighten the locknut by turning it anti-clockwise towards the appliance casing.

- If the appliance is to be installed on a wooden floor, distribute the weight by placing it on a 60 x 60 cm sheet of plywood at least 3 cm in thickness. Secure the plywood sheet to the floor.

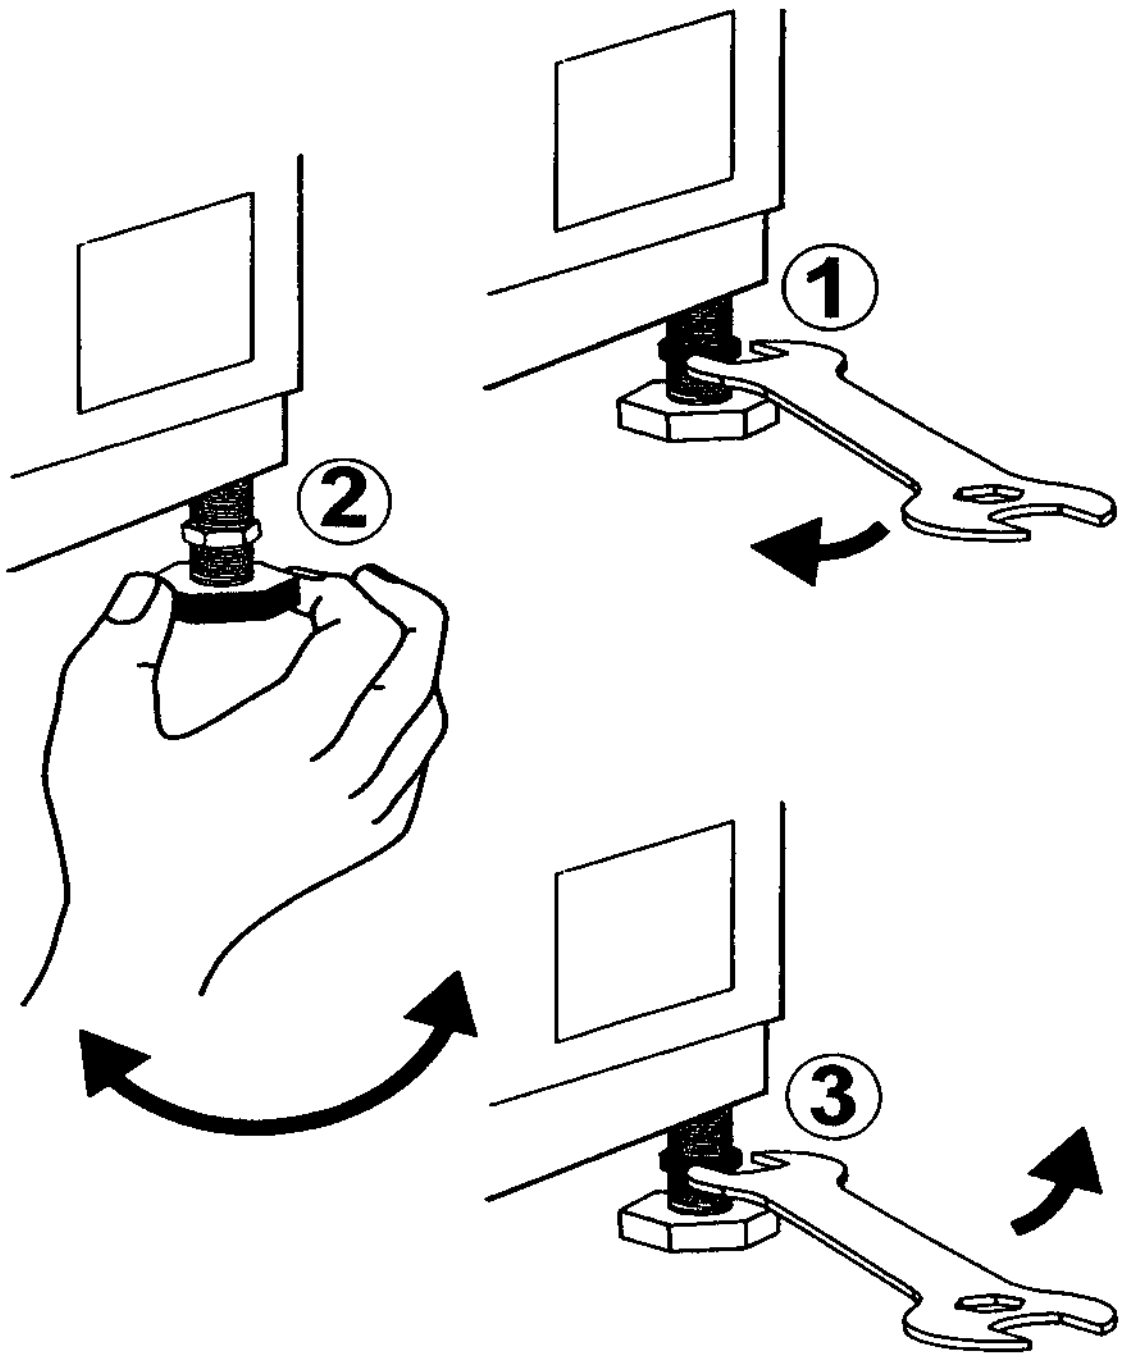

WORKTOP / COVER PANEL

The appliance must only be installed beneath a continuous fitted kitchen worktop.

- Unplug the appliance.

① Unscrew the worktop fixing screws from the rear of the appliance.

② Slide the worktop fully backward and lift it upwards to remove.
Install the cover panel following the relative instructions.

③ Refit the fixing screws and tighten them.

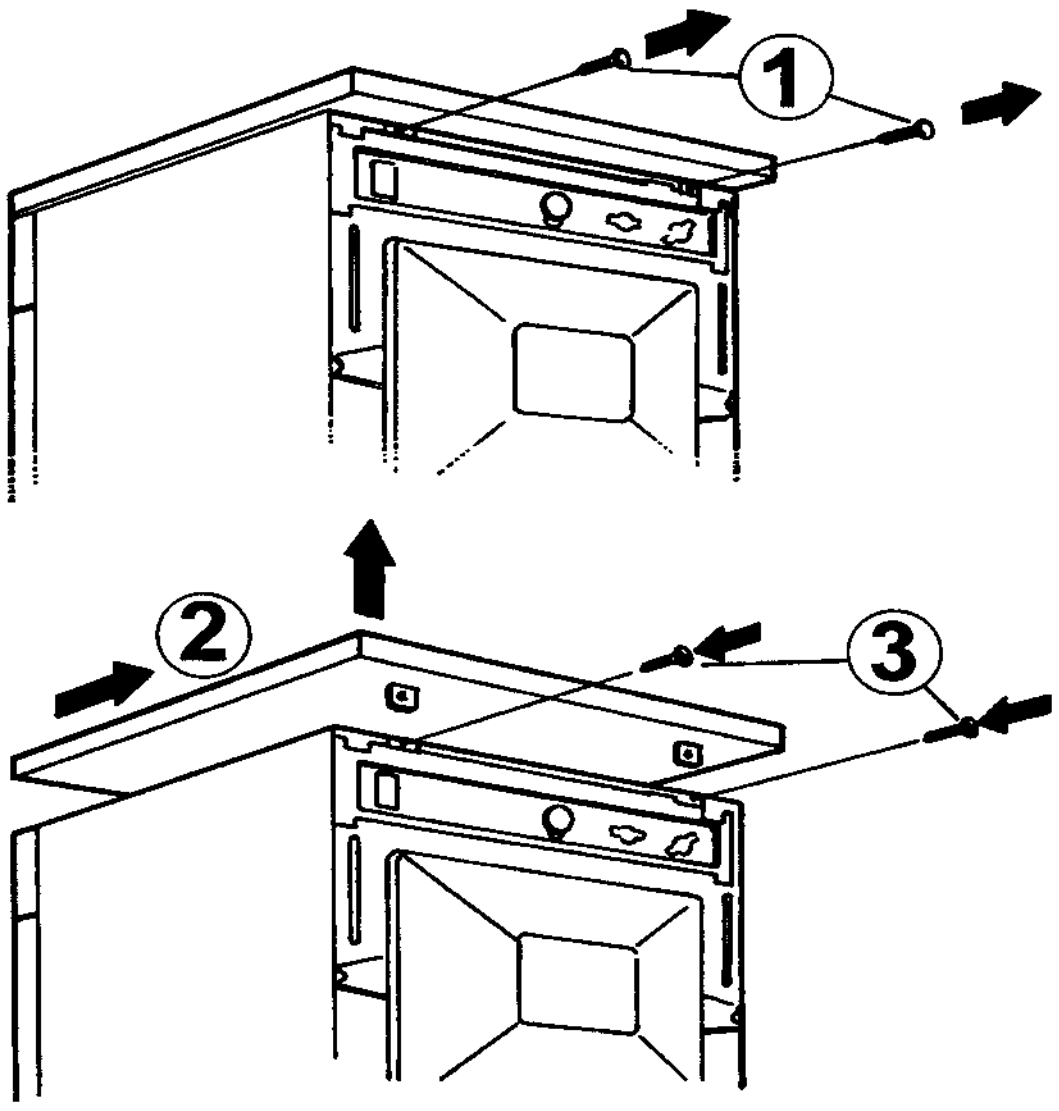

BUILD-UNDER OPENING DIMENSIONS

Width	600 mm
Height	825 mm
Depth	600 mm

WARNING:

Only plug the appliance into the mains power socket after you have fitted the cover panel or the appliance worktop.

WATER SUPPLY

- Water supply: cold water only
- Tap: 3/4" threaded hose connection
- Pressure: 10-100 N/cm² (1-10 bar).
- Cold water: not valid for UK, because there the appliances have hot and cold fill

WATER INLET HOSE(S)

1. The mesh filter supplied with the appliance must be inserted in the connection between the inlet hose(s) and the tap(s).
2. Carefully screw the hose connection onto the tap(s) preferably by hand. Make sure there are no kinks in the hose.
3. Check water-tightness of tap(s) and appliance connections by turning the tap(s) completely on.

- If the hose is too short, replace it with a suitable length of pressure resistant hose (10 bar min., EN 50065 approved type).
- Periodically check the hose for brittleness and cracks and replace if necessary.
- The appliance can be connected without an anti-backpressure valve.
- Install the appliance in accordance with regulations of your local water company.

WATER STOP (depends on model)

- The inlet hose and the plastic enclosure at the tap connection contain electrical components.
- Do not cut the hose and do not immerse the plastic enclosure in water.
- If the flexible hose is damaged, unplug the appliance from the mains immediately.
- If the hose is too short, replace it with a 3 m Water Stop hose (available from After Sales Service or from your dealer). This operation must be carried out exclusively by a licensed electrician.

DRAINING

- Connecting the water drain hose.
  Connect the drain hose to the siphon or hook it over the edge of a sink by means of the "U" bend (see figure).
  The drain hose should not be hooked onto small washbasins.

  Max. drain height: 1,25 m (4 ft)

  If you need to add an extension, use a flexible hose of the same type and secure the union with screw-on hose clips.

  Max. drain hose length: 2.50 m (8 ft).

  Important:
  Make sure there are no kinks in the hose. Secure the hose so that it cannot fall down while the appliance is running.

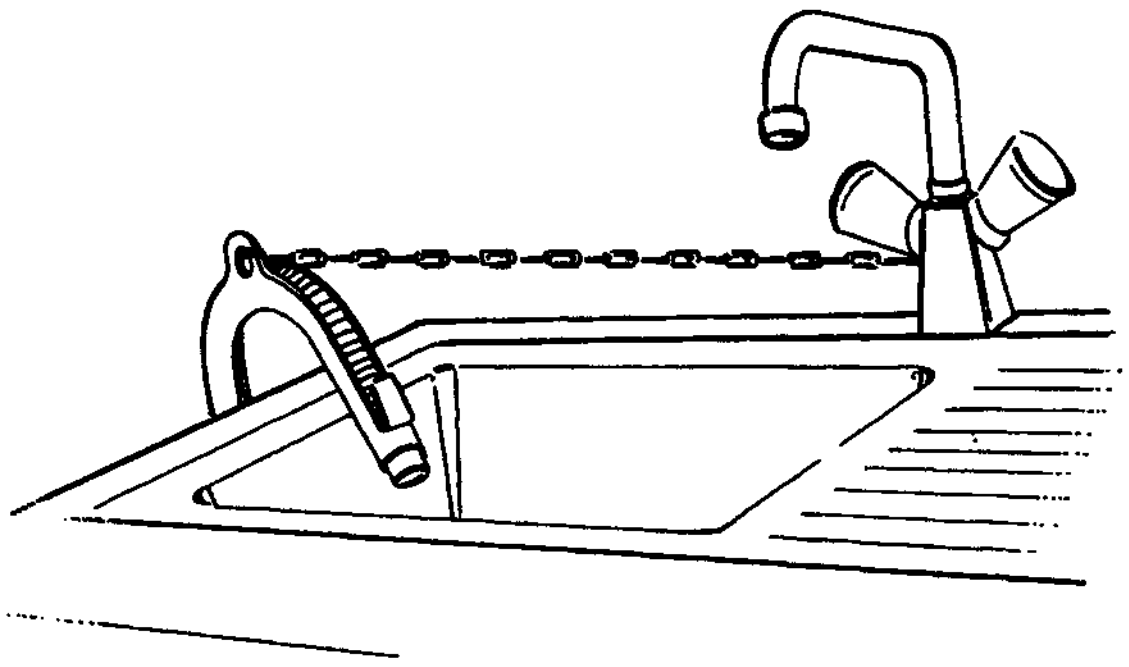

ELECTRICAL CONNECTIONS

- Electrical connections must be made in accordance with local regulations.
- The appliance must be connected to the mains exclusively by means of a socket with an earth connection in accordance with established regulations. The appliance must be earthed by law. The manufacturer declines all liability for damage to property or injury to persons or animals deriving either directly or indirectly from failure to observe the above directions.
- Voltage, power consumption and electrical protection data are supplied on the inside of the appliance door.
- The electrical power cable must be replaced, if necessary, exclusively by a licensed electrician.
- The appliance conforms to European safety regulations, EC directive 93/68/EEC and standard EN 60555.
- If a power cutoff switch is used (that is, whether already present in your domestic mains system or when installing a new system), only use a residual current device (RCD) in connection with this machine.

Do not use extension leads or multi sockets.

FOR GREAT BRITAIN ONLY

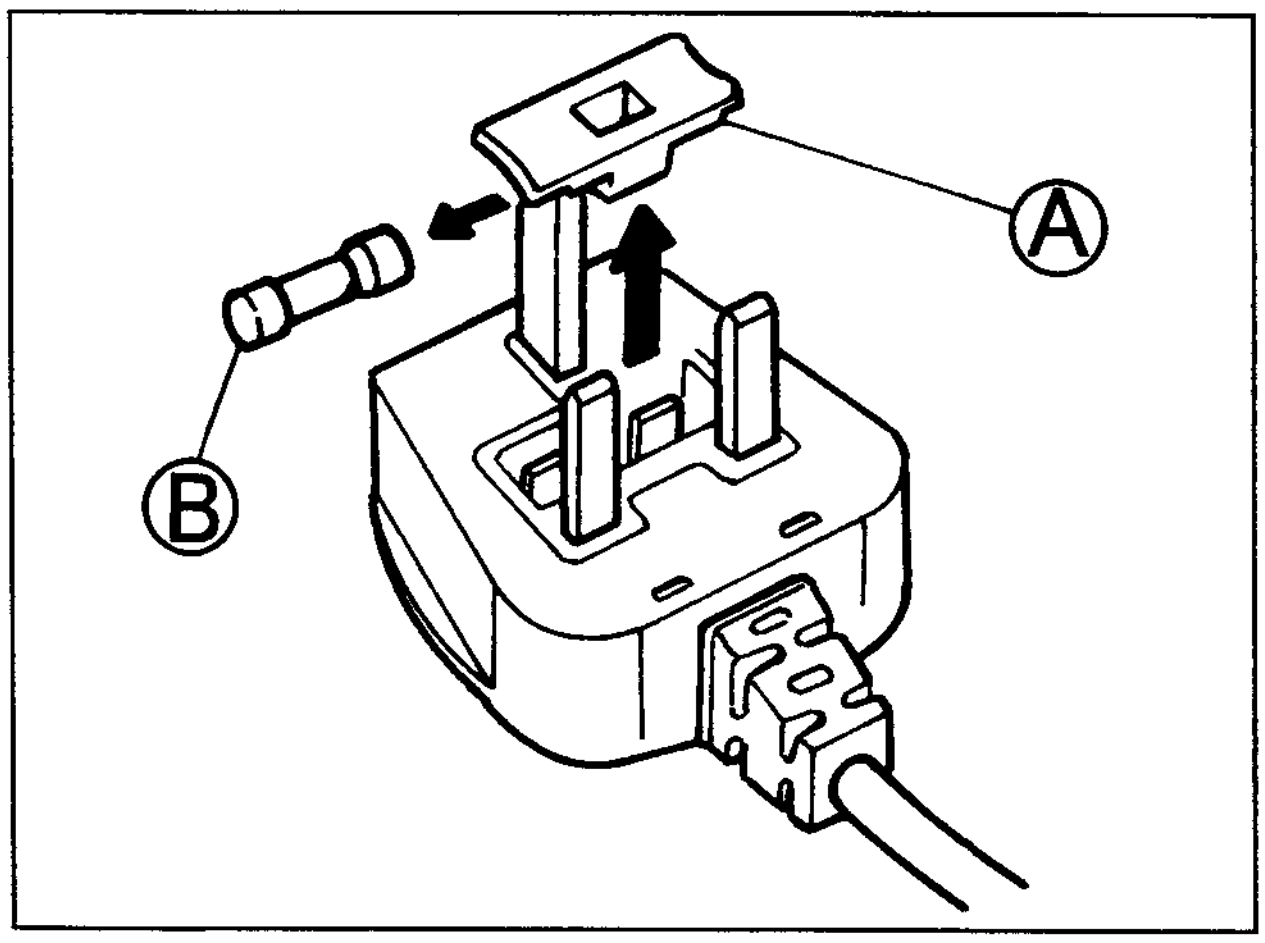

WARNING - THIS APPLIANCE MUST BE EARTHED

Some appliances are supplied with moulded plugs. To change a fuse on this type of plug proceed as follows :

1. Remove fuse cover (A) and fuse (B)
2. Fit new fuse which should be as BS 1362 13A, A.S.T.A.

IMPORTANT :

- The fuse cover must be refitted after changing a fuse.
- In the event of a fuse cover being misplaced, the plug must not be used until a correct replacement is fitted.
- Please ensure that the replacement fuse cover is of the same colour as is the insert or the as the colour embossed in words on the base of the plug.

If the moulded plug is not suitable for your sockets it should be cut off and thrown away to avoid risk of electric shock if used in a 13A socket elsewhere.

A suitable alternative plug should then be fitted to the cable.

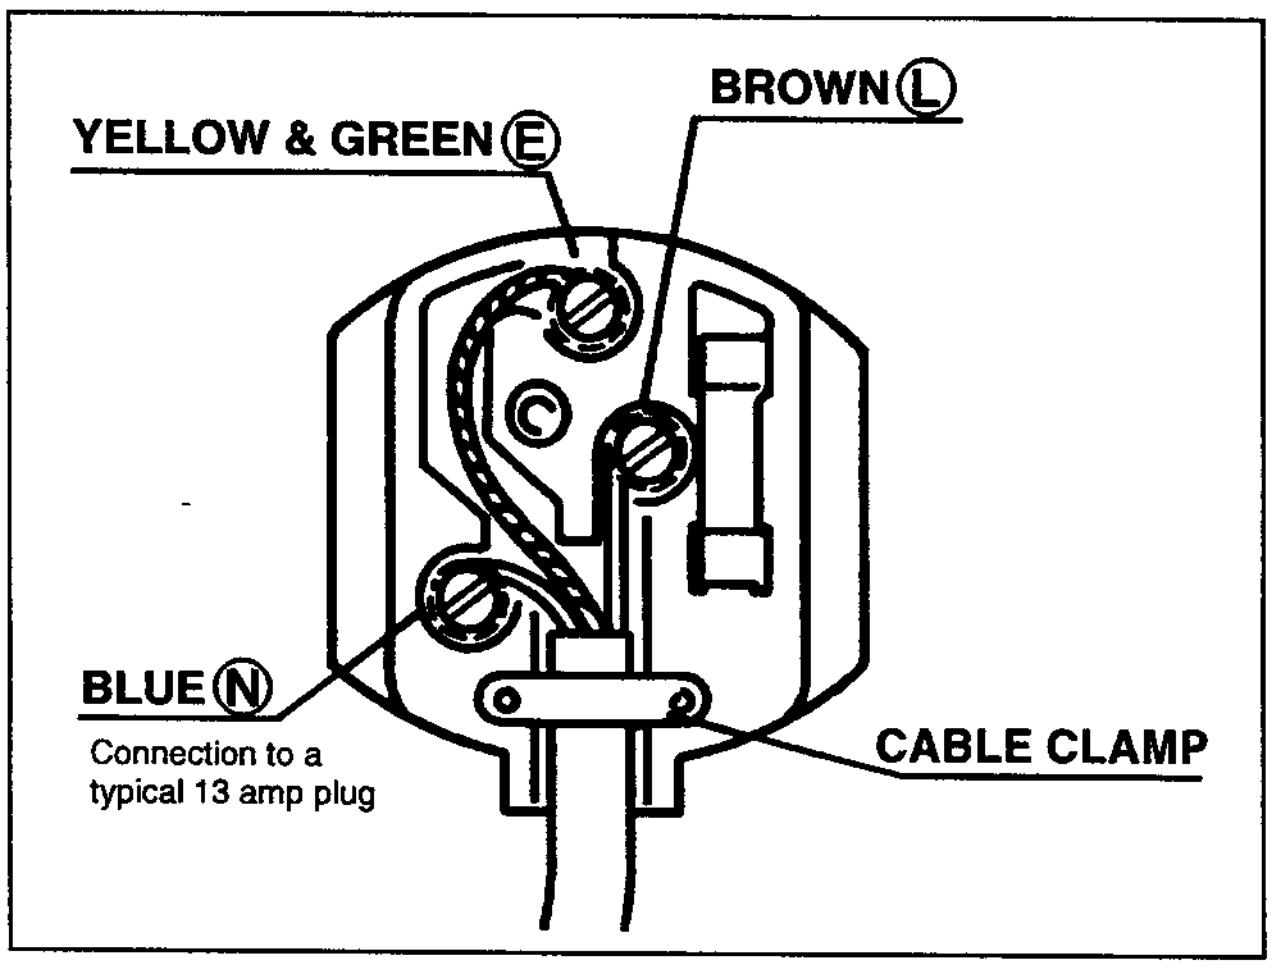

Connection to a typical 13 amp plug

HOW TO CONNECT A PLUG

The wires in this mains lead are colour-coded as follows:

BLUE - NEUTRAL (N)

BROWN - LIVE (L)

GREEN AND YELLOW-EARTH (E)

1. The GREEN AND YELLOW wire must be connected to the terminal in the plug which is marked with the letter "E" or by the Earth symbol ⏚ or coloured green or green and yellow.
2. The BLUE wire must be connected to the terminal which is marked with the letter N or coloured black.
3. The BROWN wire must be connected to the terminal which is marked with the letter L or coloured red.

FOR THE REPUBLIC OF IRELAND ONLY

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

In this case the GREEN AND YELLOW wire must be connected to the EARTH contact and the other two wires to the terminals of the two pins, irrespective of colour.

MOBILITY WHEELS (for UK only)

Depending on model, your washing machine is provided with mobility wheels .

You will find these wheels in the accessory kit supplied with the machine, or you can order them from our After-Sales Service

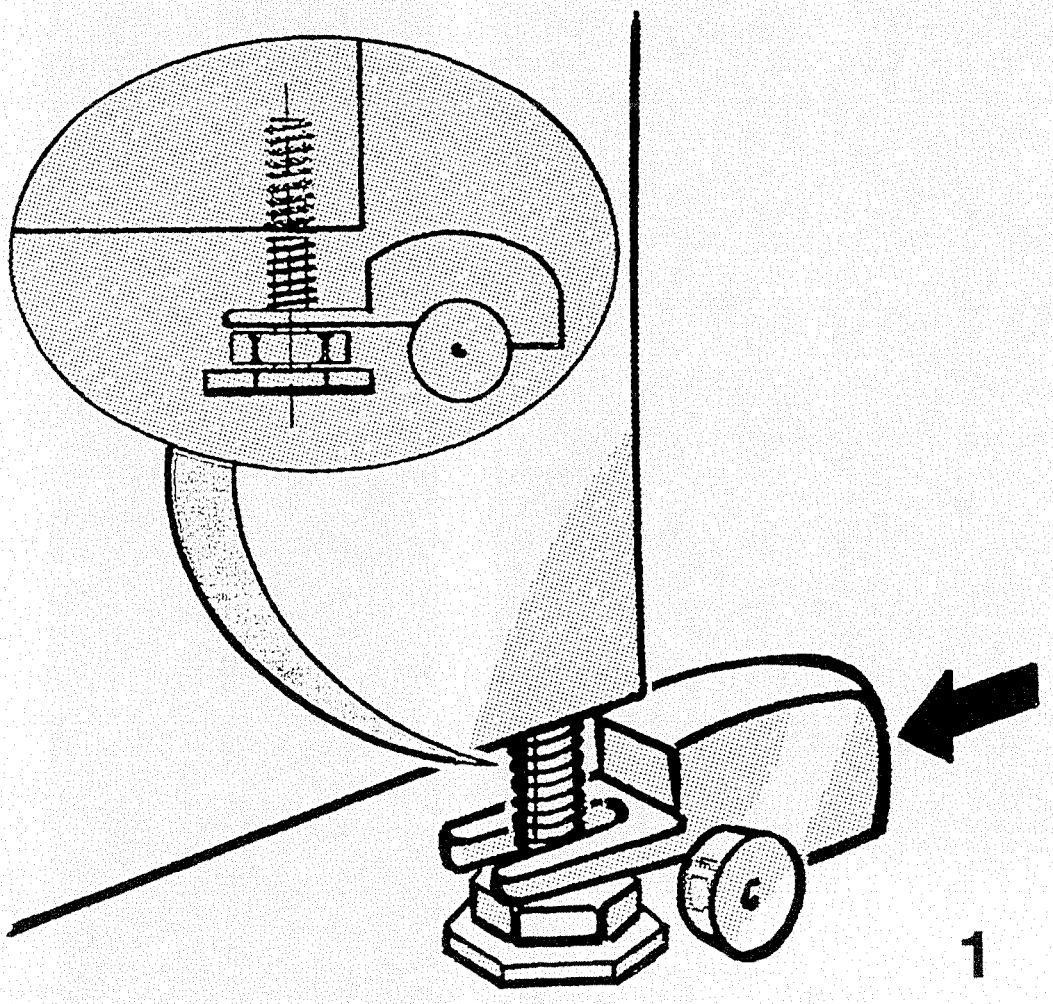

1

MOUNTING INSTRUCTIONS

1. Tilt the machine forward.
2. Loosen the two rear feet.
3. Insert the wheels as close as possible to the screw (1).
4. Tighten the screw completely (2).
5. Put the machine in an upright position.
6. Adjust the front feet making sure that the machine is completely level with the floor.

Note: Levelling is extremely important to avoid any risk of instability and vibrations.

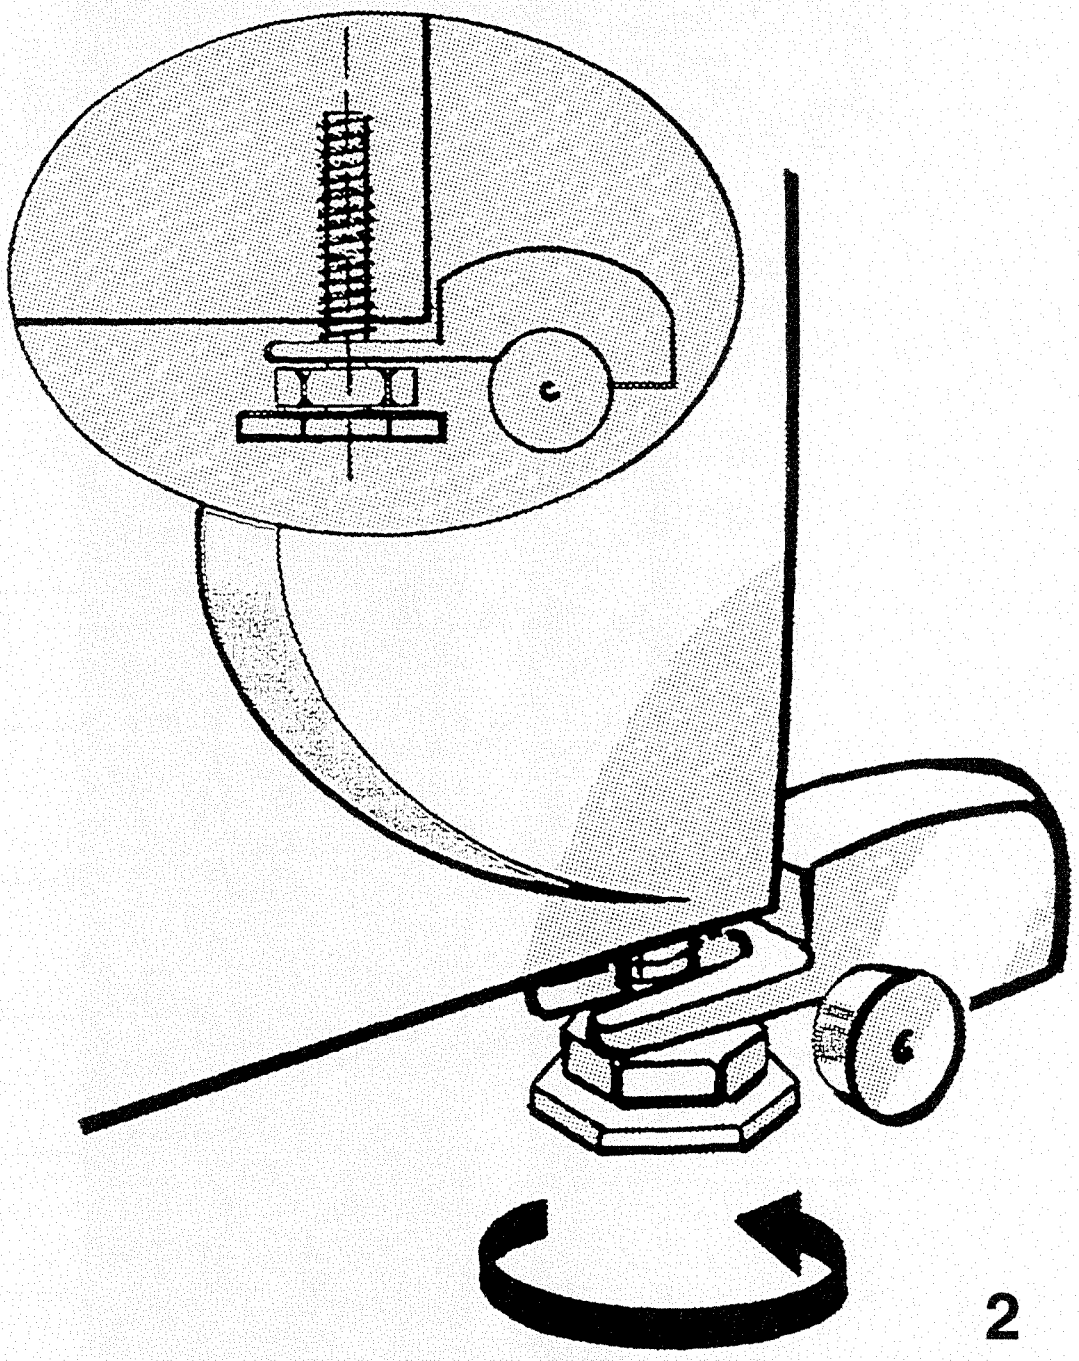

2

MOVING THE MACHINE

1. Open the door of the machine.
2. Lift the machine 1 or 2 cm (3).
3. Push or pull the machine according to your need.

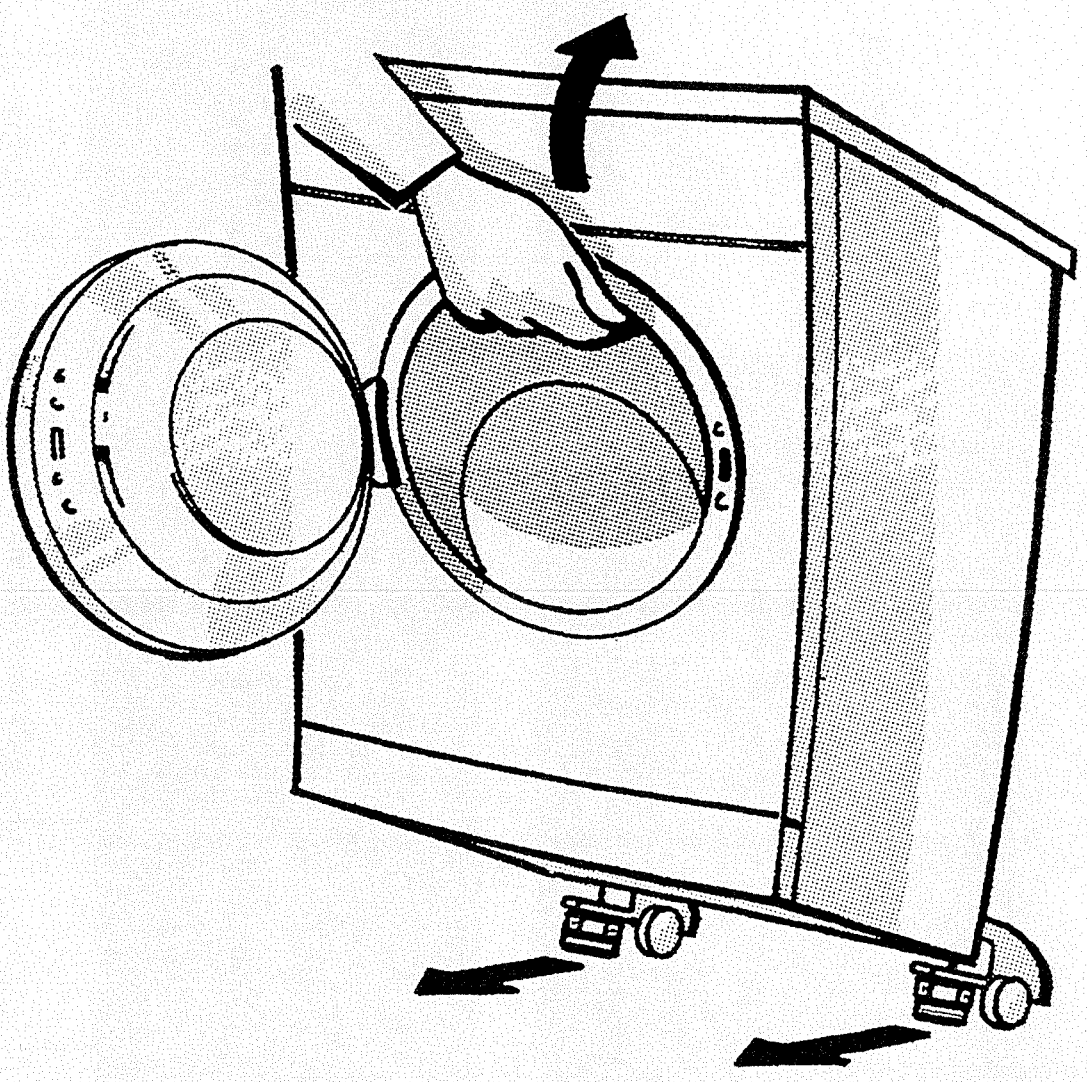

3

GB

PROGRAMME TABLE

Bauknecht is a registered trademark

Indicator: Water Stop
Door free
h Start Delay
(if available) min Remaining Time

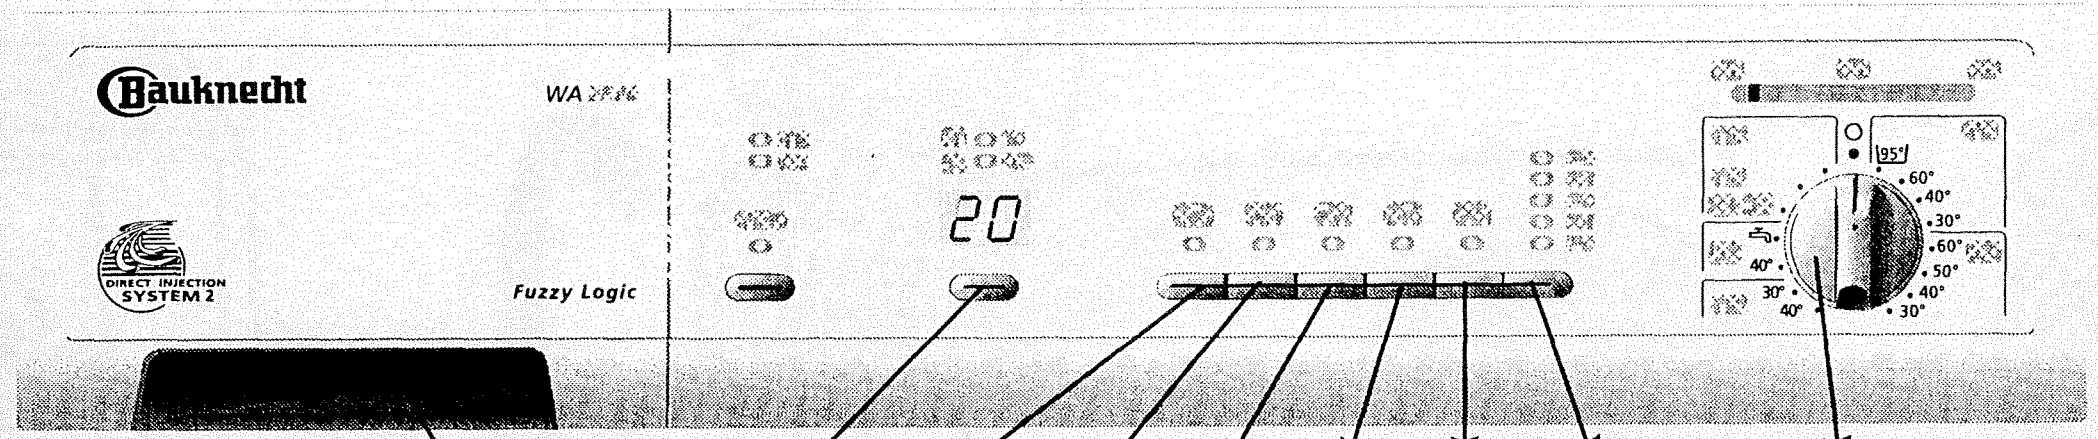

Indicator:
Wash Rinse Spin

Programme	Care label	Type of fabric / Degree of soiling	Max. Load	Detergent and Additives			Options = ✻							Programme Selector	Pro-gramme Duration 2)	Notes
			kg	Soft-ener	Main Wash	Pre-wash	Start delay h	Energy Save/ Eco	Short	Inten-sive Rinse	Rinse Hold	Pre-Wash	Spinning		approx. Min.	
Cotton	95	Lightly to averagely soiled bed linen, table linen, underwear, towels, shirts etc. (linen and cotton) etc.	Normal 5.0 Short 3.0	✻	yes	✻	✻	✻	✻ max 60°	✻	✻	✻	✻	Cotton 95°	115 Short: 60	For heavily soiled loads the Prewash option can also be selected. If "Short" is selected the options "Energy save/ Eco", "Intensive Rinse" and Prewash" are inhibited.
Cotton Coloured	60 40 30	Lightly to averagely soiled bed linen, table linen, underwear, towels, shirts etc. (linen and cotton) etc.	Normal 5.0 Short 3.0	✻	yes	✻	✻	✻	✻	✻	✻	✻	✻	Cotton Coloured 60°,40°,30°	110 Short: 60	
Easy care	60 50 40 30	Lightly to averagely soiled blouses, shirts, etc. made of polyester (Diolen,Trevira), polyamide (Perlon, Nylon) or blends with cotton.	Normal 2.5 Short 1.5	✻	yes	✻	✻	✻	✻	✻	✻	✻	✻ 1)	Easy care 60°,50°,40°,30°	80 Short: 40	If "Short" is selected the options "Energy save/Eco", "Intensive Rinse" and "Prewash" are inhibited.
Delicates	40 30	Curtains, delicate dresses, skirts, shirts and blouses.	1.5	✻	yes	✻	✻	—	—	—	✻	✻	✻ 1)	Delicates 40°, 30°	45	—
Wool		Only machine washable woollens with pure new wool label.	1.0	✻	yes	—	✻	—	—	—	✻	—	✻ 1)	Wool 40°,	35	If you select the special option "Rinse Hold" don't leave garments to soak for too long.
Rinse + Spin		—	5.0	✻	—	—	—	—	—	✻	✻	—	✻	Rinse + Spin +	—	Programme for treating wash with starch or softener. Terminates with an intensive spin cycle, same as the spin cycle in the Cotton Coloured programme.
Gentle Spin		—	5.0	—	—	—	—	—	—	—	—	—	✻ 1)	Gentle Spin	—	Programme for gentle spin cycle, same as the spin cycle in the Wool programme.
Draining		—	—	—	—	—	—	—	—	—	—	—	—	Draining	—	Drain only without spin cycle. Alternative way of terminating programmes with "Rinse hold" setting.

---

1) For improved garment care spin speed is restricted to 900 rpm.
2) The programme duration figures are approximate values for a programme with maximum temperature but without special options.

Power and water consumption data

Programme	Temperature	Maximum load	Special options	Water	Electricity	Programme duration
	°C	(kg)		(l)	(kWh)	(Min.)
Cotton	95	5		57	1.70	115
Cotton	95	5	Eco	49	1.10	120
Cotton Coloured	60	5	Eco	49	0.95	125
Cotton Coloured	60	5		49	1.10	110
Cotton Coloured	60	2.5		38	0.90	105
Cotton Coloured	40	5		49	0.55	95
Cotton Coloured	30	3	Short	32	0.25	45
Easy care	60	2.5		59	0.70	90
Easy care	40	2.5		53	0.50	80
Easy care	30	1.5	Short	36	0.20	35
Delicate	40	1.5		55	0.50	50
Wool	40	1		55	0.50	40

Programmes with Prewash last approx. 15 minutes longer.
The consumption data have been measured in the conditions specified in Standard IEC 456.
The data under the heading "Energy" refer to programme "Coloured 60°C" with special option "Energy Save" selected.
Consumption in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
*) The remaining time display (if available) may differ from the values given in the table since it depends on the conditions of use in the home.

NORMAL DAILY USE:

1. Turn on the tap(s).
2. Sort the wash according to fabric type and colour and load the appliance.
3. Close the door.
4. Put in detergent and any additives you intend to use.
5. Select the programme, the temperature and any special options required.
6. The indicator above the "Start"-button flashes. Hold down the "Start"-button for about 1 second.

IMPORTANT:
During the first 15 minutes of the cotton and easy care/synthetic programmes (both without prewash) the door can be opened for adding laundry. This is not possible if "Short/Rapid wash" is selected.

PROGRAMME RESELECTION:

a) CONTINUING WITH A NEW PROGRAMME
   1. Select the new programme.
   2. The indicator above the "Start"-button flashes. Hold down the "Start"-button for about 1 second.
      The new programme continues with the same step at which the previous programme was interrupted.

b) CANCELLING THE CURRENT PROGRAMME AND RESTARTING WITH A NEW ONE
   Do not put more detergent into the machine for the new programme, since no water is drained when a programme is cancelled.
   1. Hold down the "Start" button for 5 seconds, or until the programme control audibly restarts and the remaining time indicator displays "00".
   2. Wait until the programme sequence indicator has returned to its initial (leftmost) position.
   3. Set the programme selector to "0".
   4. Select the new programme and any special options desired.
   5. The indicator above the "Start"-button flashes. Hold down the "Start"-button for about 1 second.

TO INTERRUPT / PAUSE A PROGRAMME:
To interrupt a programme for a certain time and resume it later:

1. Set the programme selector to "0".
2. After the desired time, reselect the programme.
3. Hold down the "Start" button for about 1 second.

AUTOMATIC SAFETY FUNCTIONS / FAULTS:
This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately.
Often, however, the faults detected are small enough to be solved in a matter of minutes. For example:

- The machine will not start
- The additive product is not being fully washed out of the detergent dispenser
- The machine is unstable during the spin cycle
- The machine does not spin at the end of the programme

Information about the above problems can be found in the Quick Reference Guide under "Automatic safety functions / faults".
What should I do when the automatic safety system detects a malfunction?
The programme is interrupted and the fault is indicated as follows:

INDICATORS FLASHING	**DISPLAY FIELD** (if available)	**SOLUTION** Follow instructions given below...
"Start", "Water Stop"	Remaining time (a number from 15 to 99)	"Water Supply Fault"
"Spin speed", "Remaining time", "Start delay", "Water stop"	E1	"Water Supply Fault"
"Spin speed", "Remaining time", "Start delay", "Water stop"	E3	"Draining Fault"
"Spin speed", "Remaining time", "Start delay"	E4 or E5 or E6 or E7 or E8 or E9	"Electrical Component Fault"
Machines with Water stop: "Spin speed", "Remaining time", "Start delay"	E2	"Water Stop Fault"